

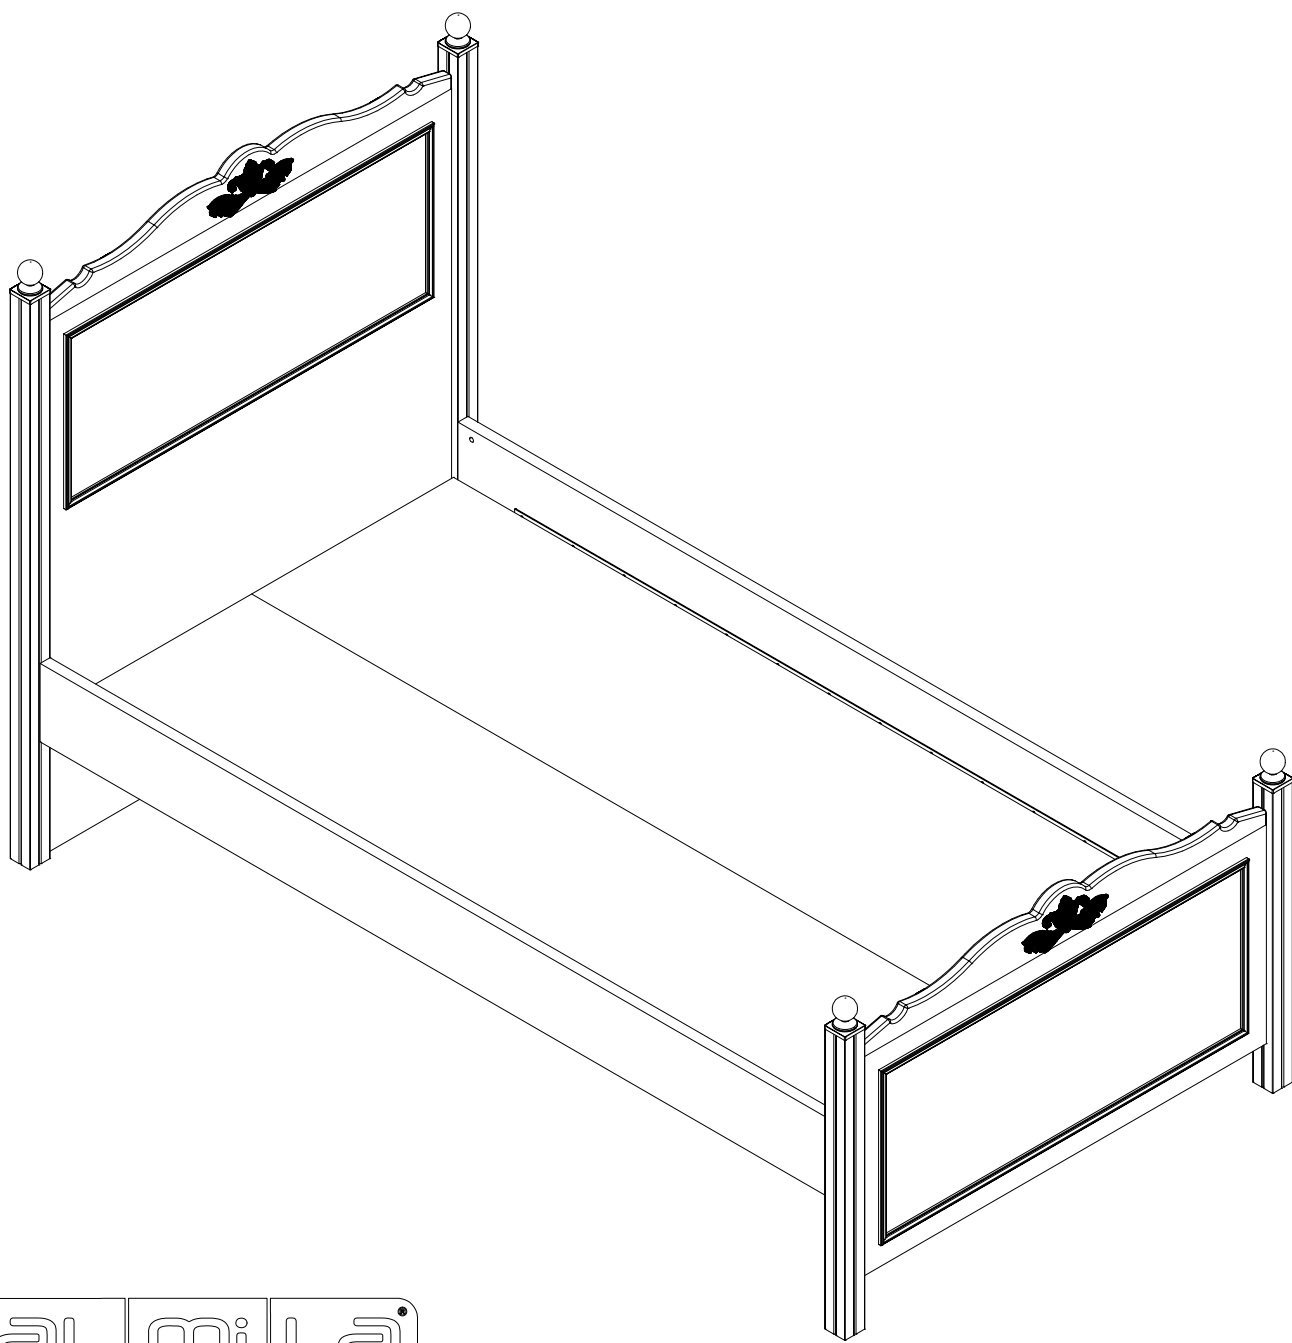
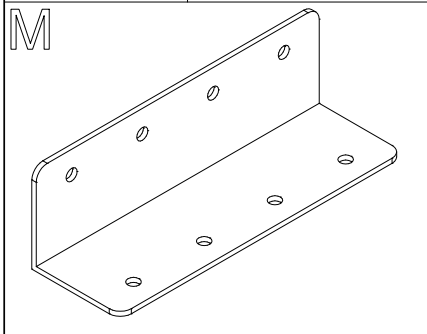
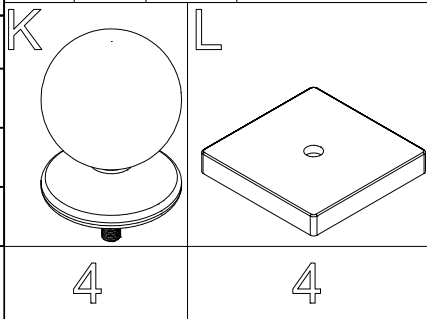


# Montaj Talimatı (Assembly Instruction) -1

## LORA - HEADBOARD & BEDFRAME (90-100-120)-(v02)

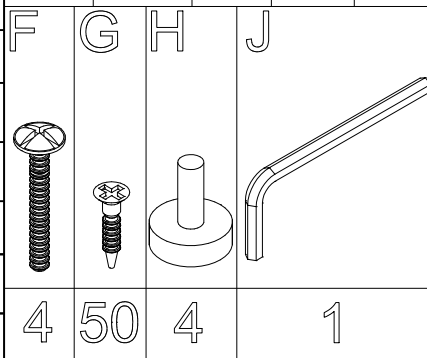


NO	W	x	L	x	H
01(90)	920	x	1153	x	18
01(100)	1020	x	1153	x	18
01(120)	1220	x	1153	x	18
02	1230	x	50	x	50
03	1230	x	50	x	50
04	1988	x	170	x	25
05	1988	x	170	x	25
06(90)	920	x	478	x	18
06(100)	1020	x	478	x	18
06(120)	1220	x	478	x	18
07	655	x	50	x	50
08	655	x	50	x	50
09(90)	919	x	115	x	25
09(100)	1019	x	115	x	25
09(120)	1219	x	115	x	25
10(90)	2000	x	455	x	18
10(100)	2000	x	505	x	18
10(120)	2000	x	605	x	18

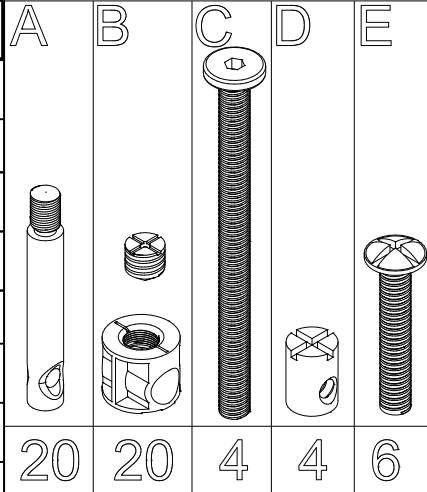

2





# Montaj Talimatı (Assembly Instruction) -2

## LORA - HEADBOARD & BEDFRAME (90-100-120)-(V02)

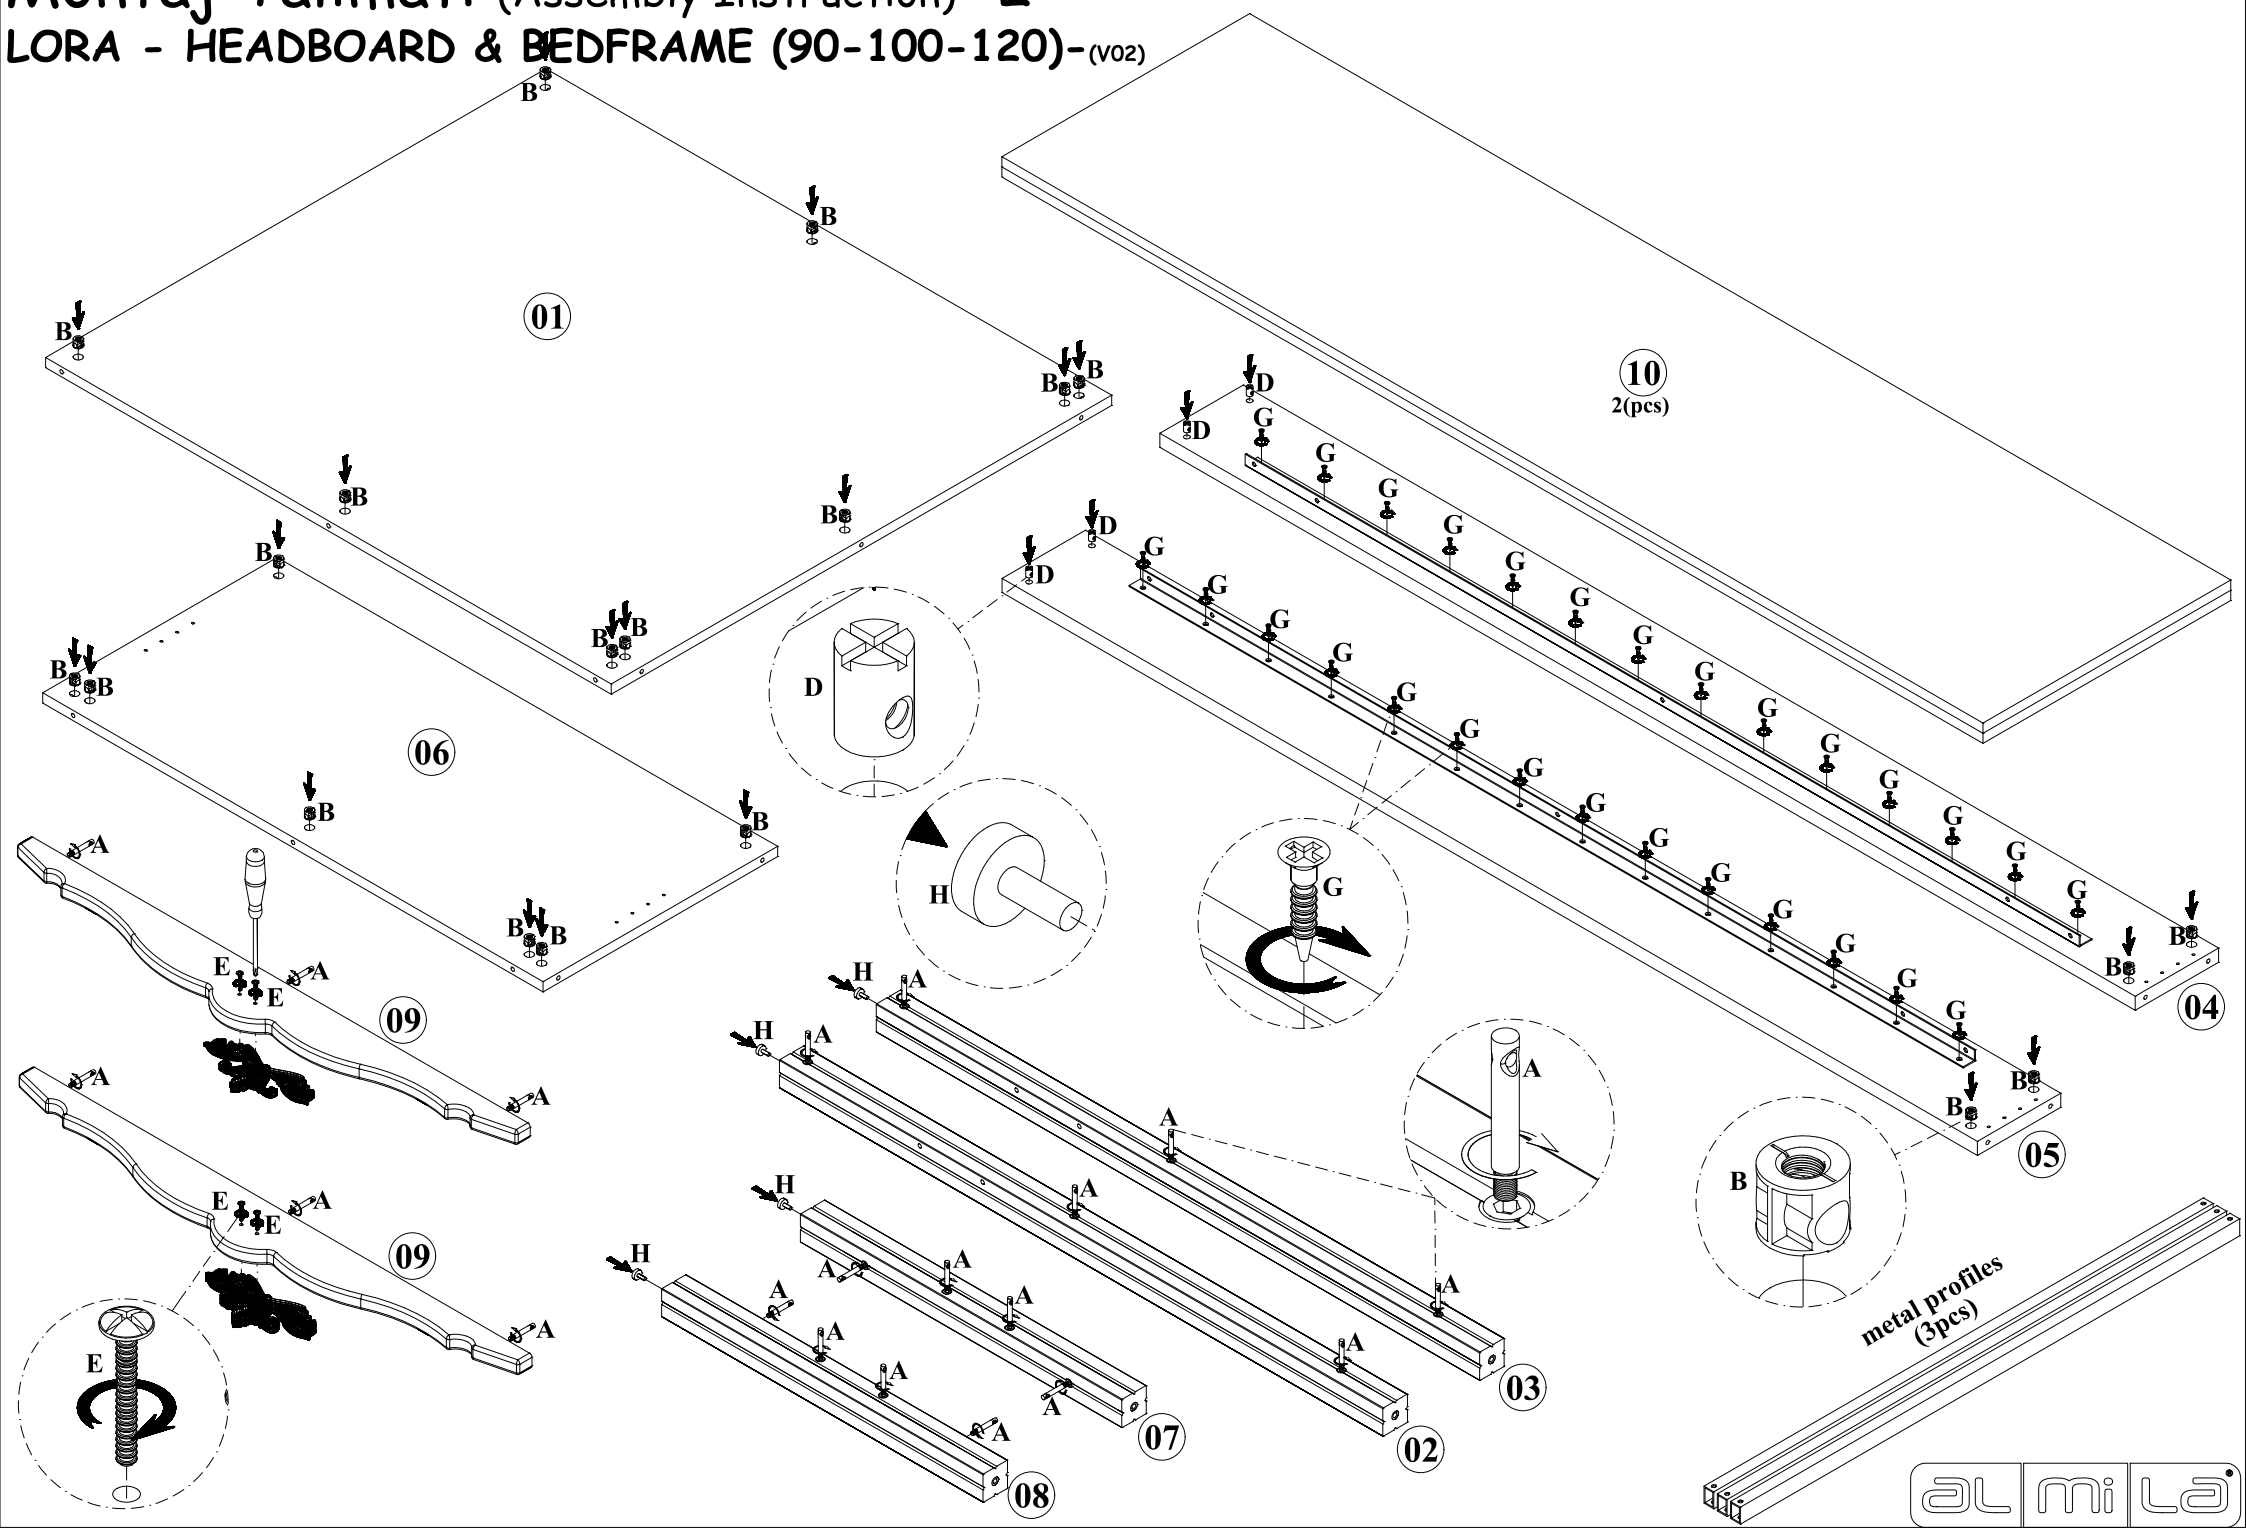

# Montaj Talimatı (Assembly Instruction) -3

## LORA - HEADBOARD & BEDFRAME (90-100-120)-(V02)

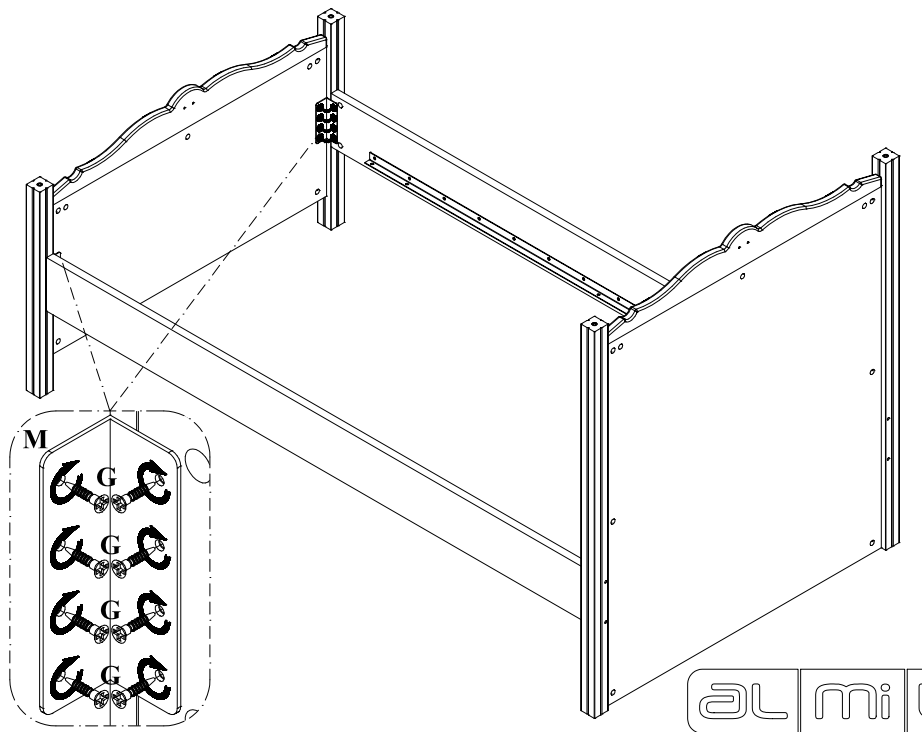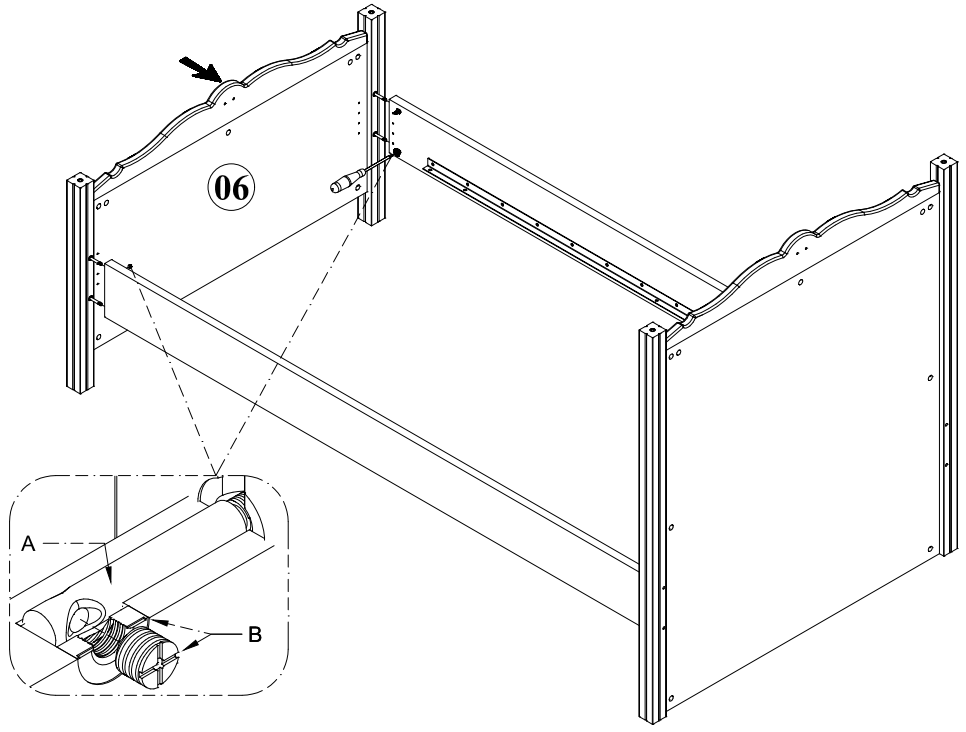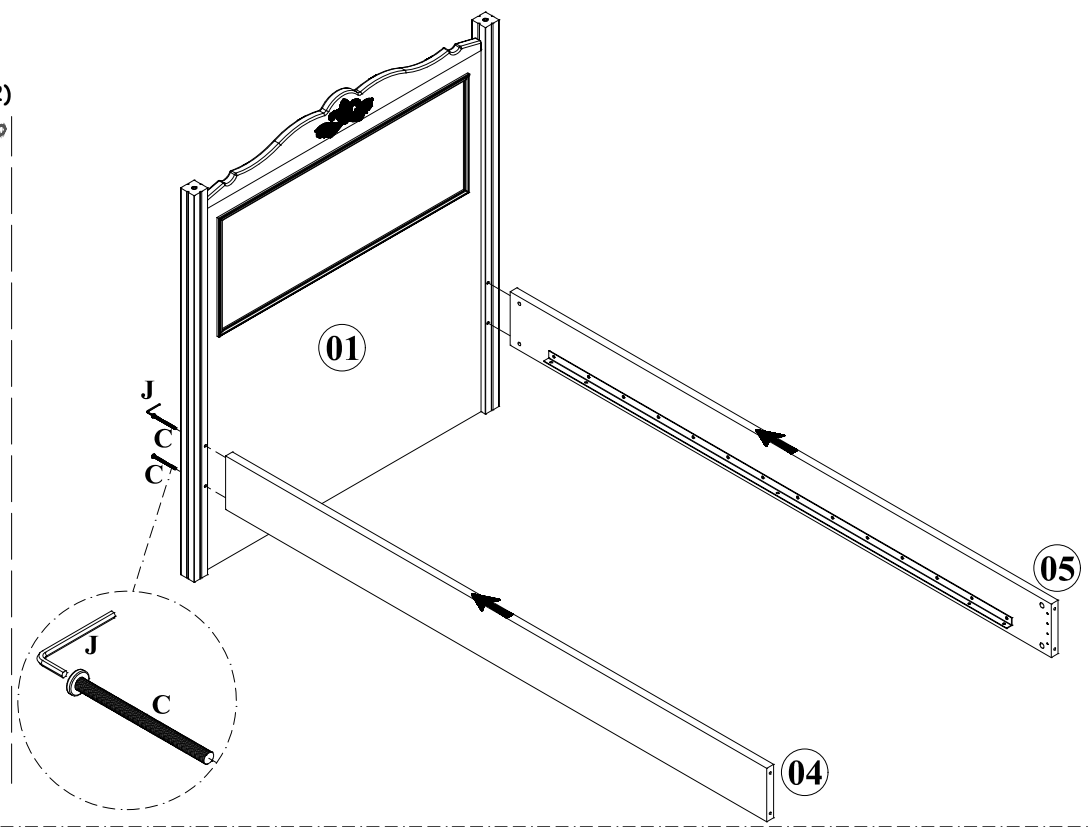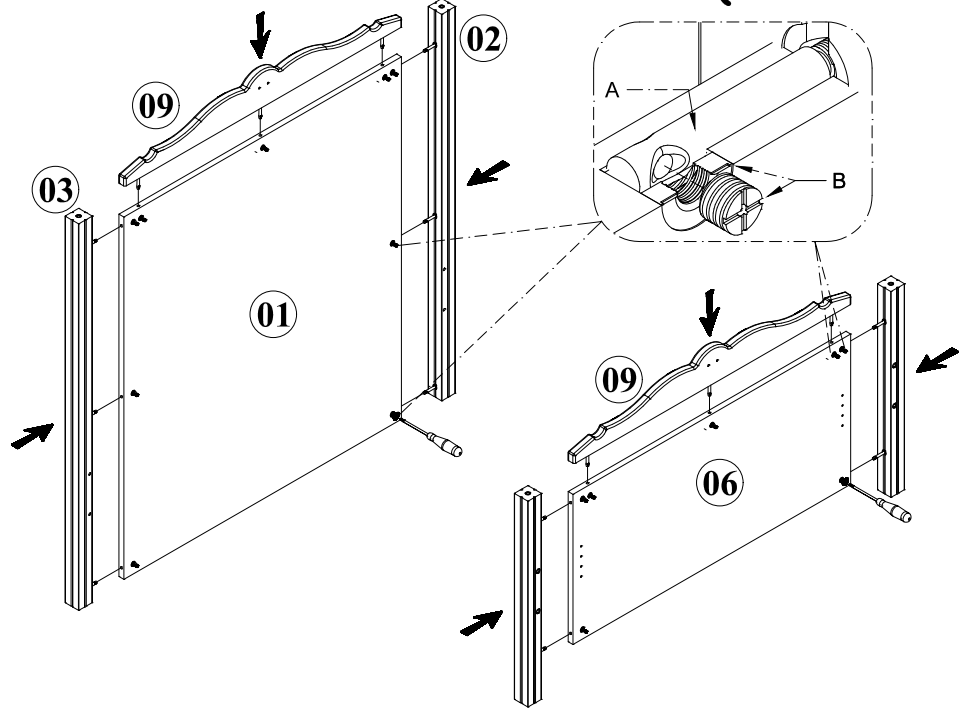

# Montaj Talimatı (Assembly Instruction) -4

## LORA - HEADBOARD & BEDFRAME (90-100-120)-(v02)

