


Montaj Talimatı (Assembly Instruction) -1

IRONY - HEADBOARD & BEDFRAME (90&100&120)-VN7

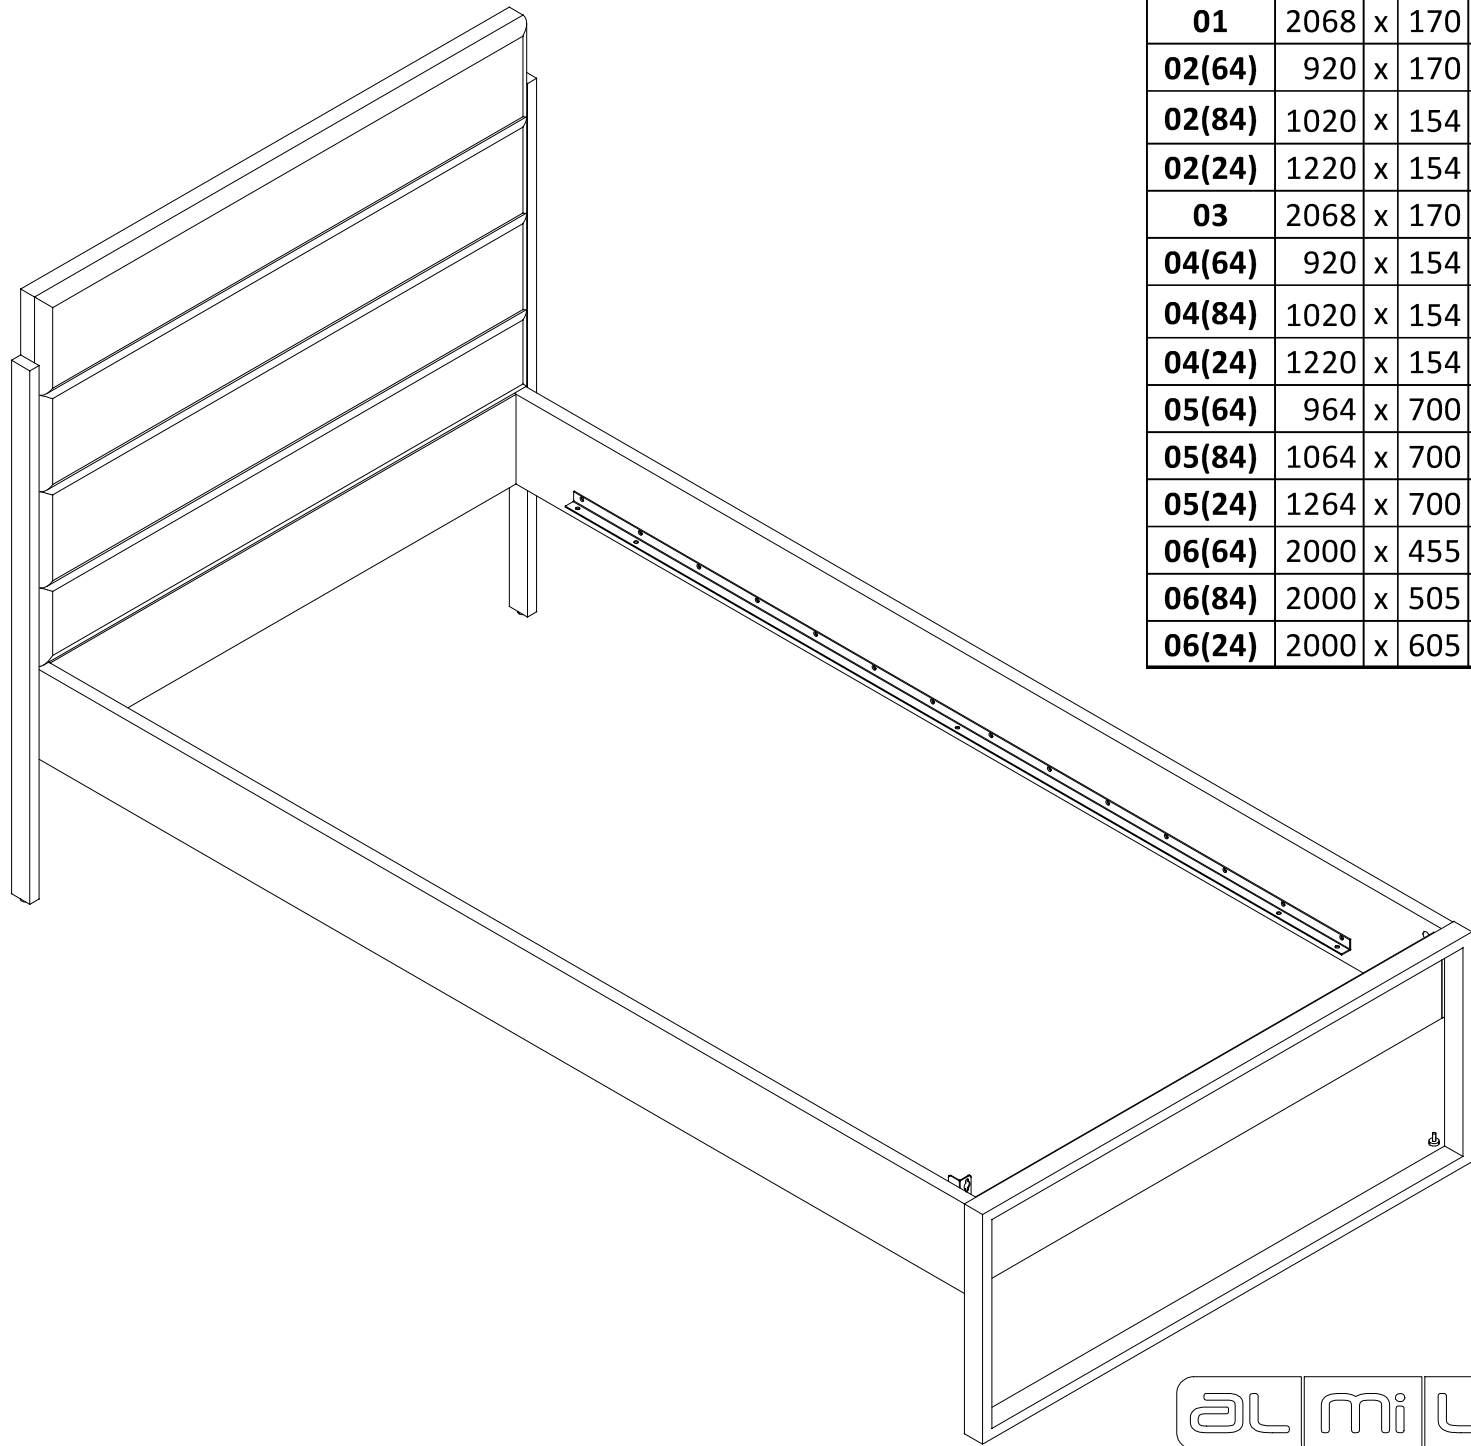


NO	W	x	L	x	H
01	2068	x	170	x	25
02(64)	920	x	170	x	18
02(84)	1020	x	154	x	18
02(24)	1220	x	154	x	18
03	2068	x	170	x	25
04(64)	920	x	154	x	18
04(84)	1020	x	154	x	18
04(24)	1220	x	154	x	18
05(64)	964	x	700	x	50
05(84)	1064	x	700	x	50
05(24)	1264	x	700	x	50
06(64)	2000	x	455	x	18
06(84)	2000	x	505	x	18
06(24)	2000	x	605	x	18

A	B	C	D	E
4	4	4	4	42
F	G	H	J	K
4	4	6	4	4
L	M			
1	4			






Montaj Talimatı (Assembly Instruction) -2

IRONY - HEADBOARD & BEDFRAME (90&100&120)-VN7

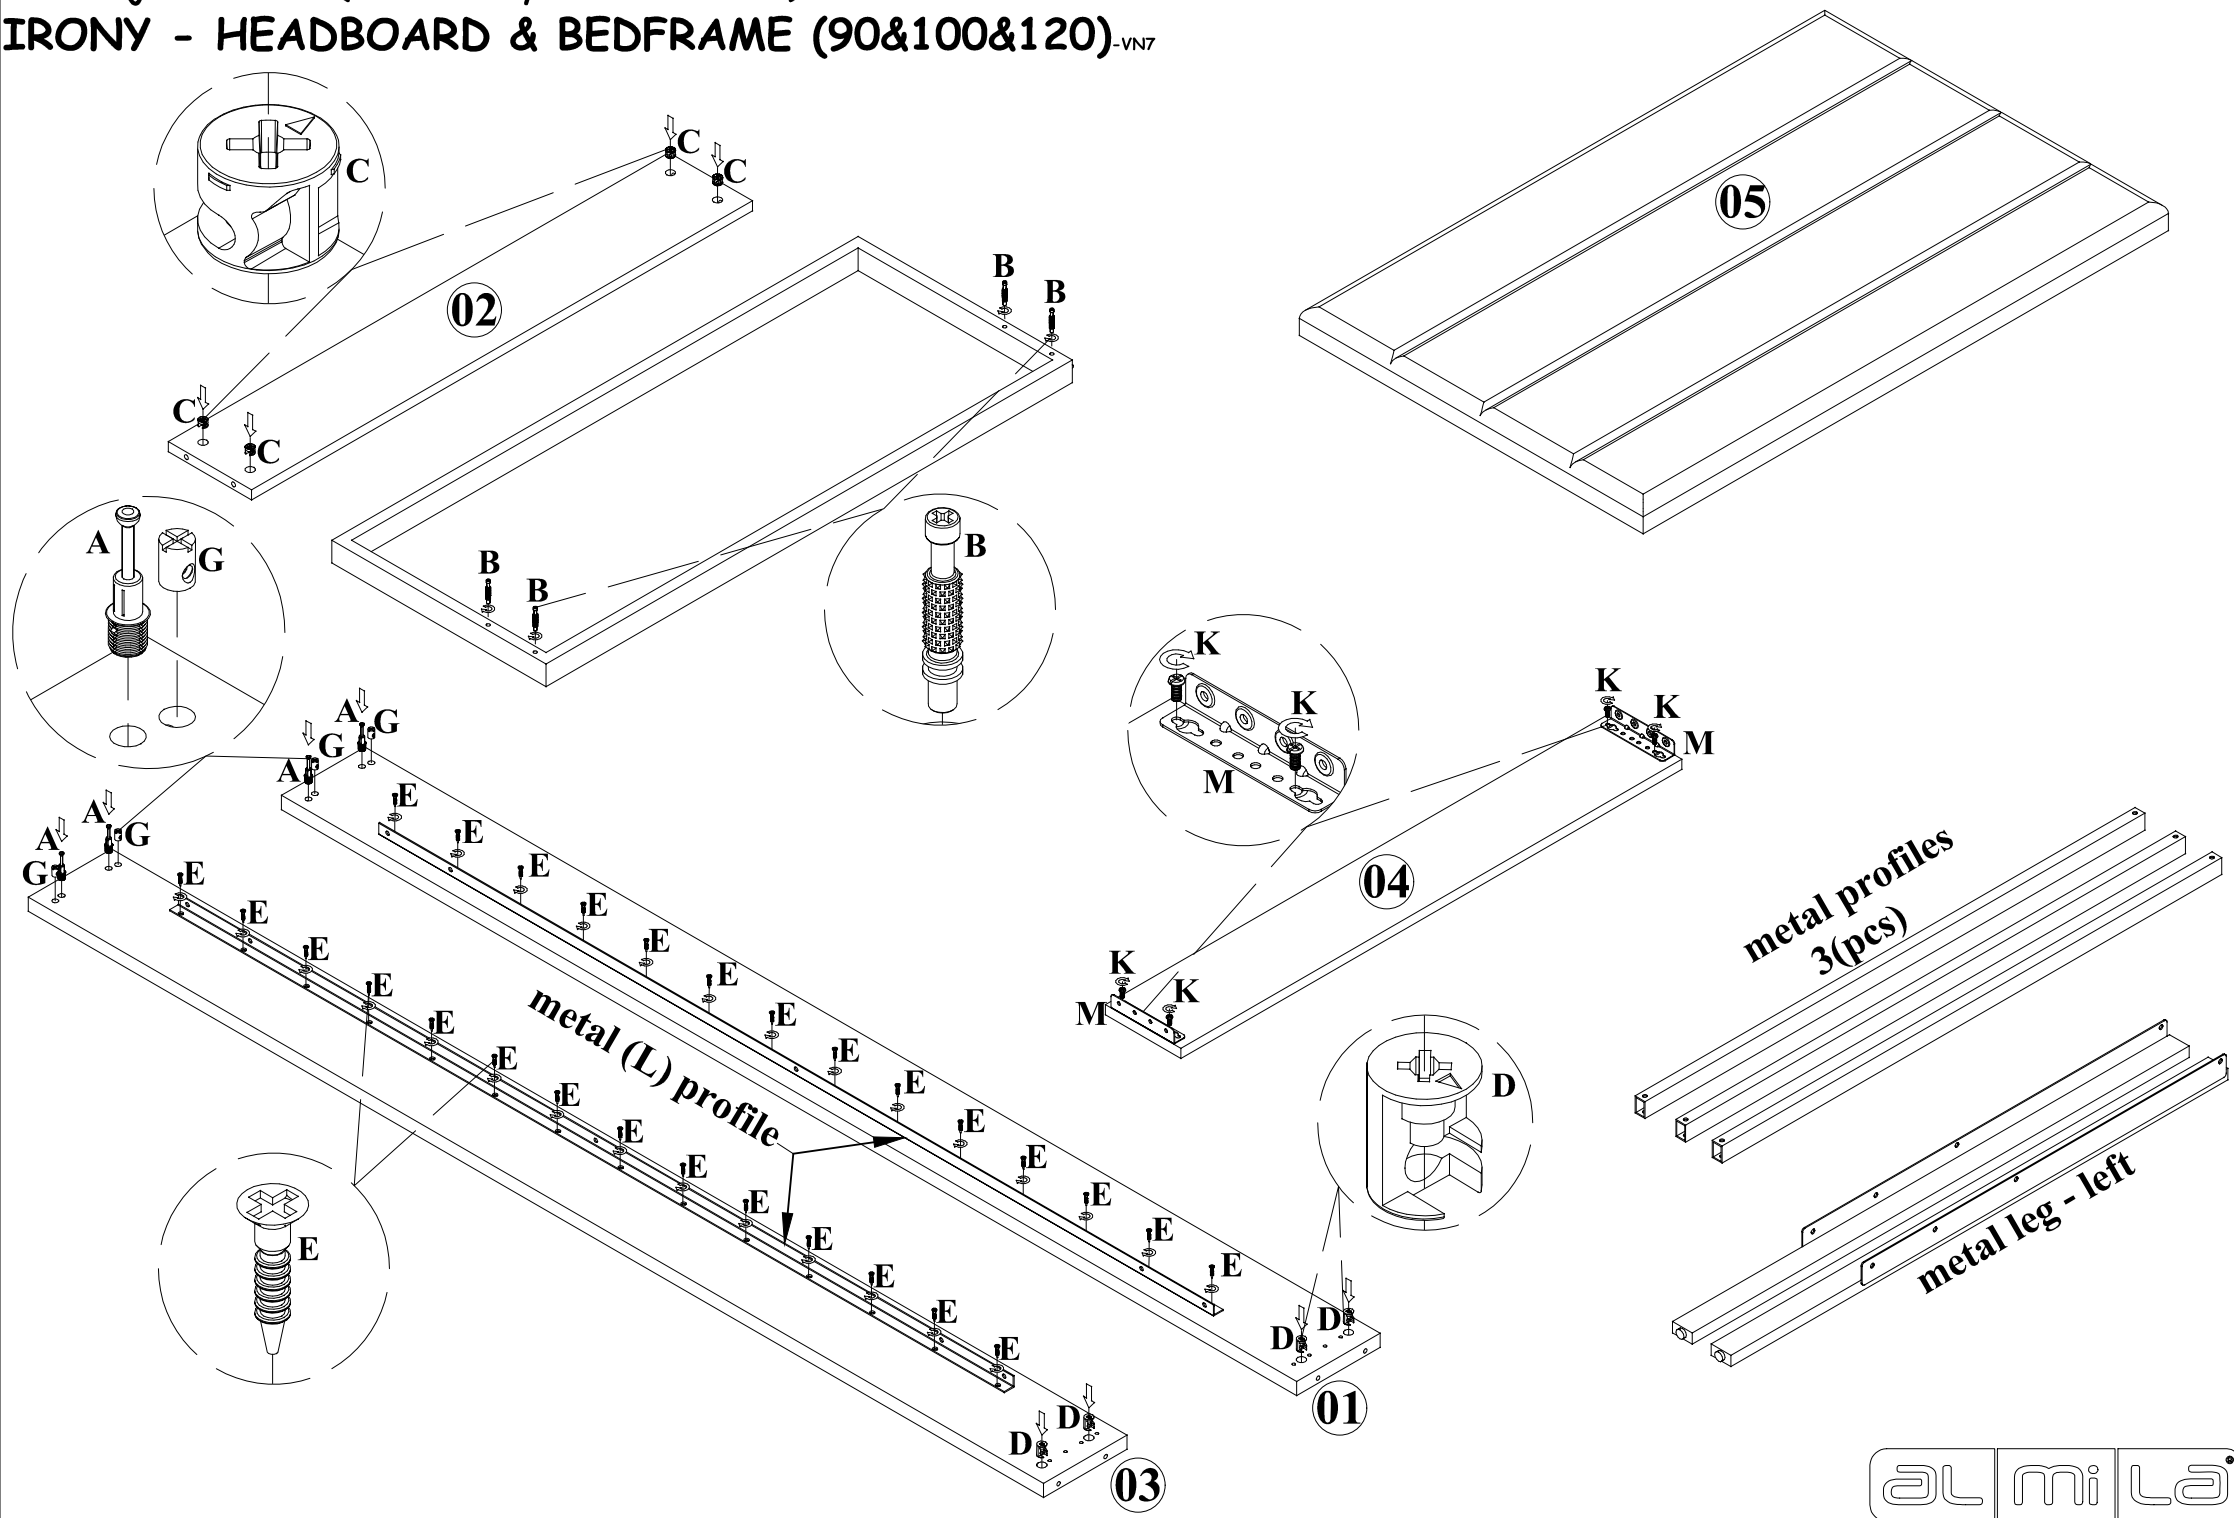

Montaj Talimatı (Assembly Instruction) -3

IRONY - HEADBOARD & BEDFRAME (90&100&120)-VN7

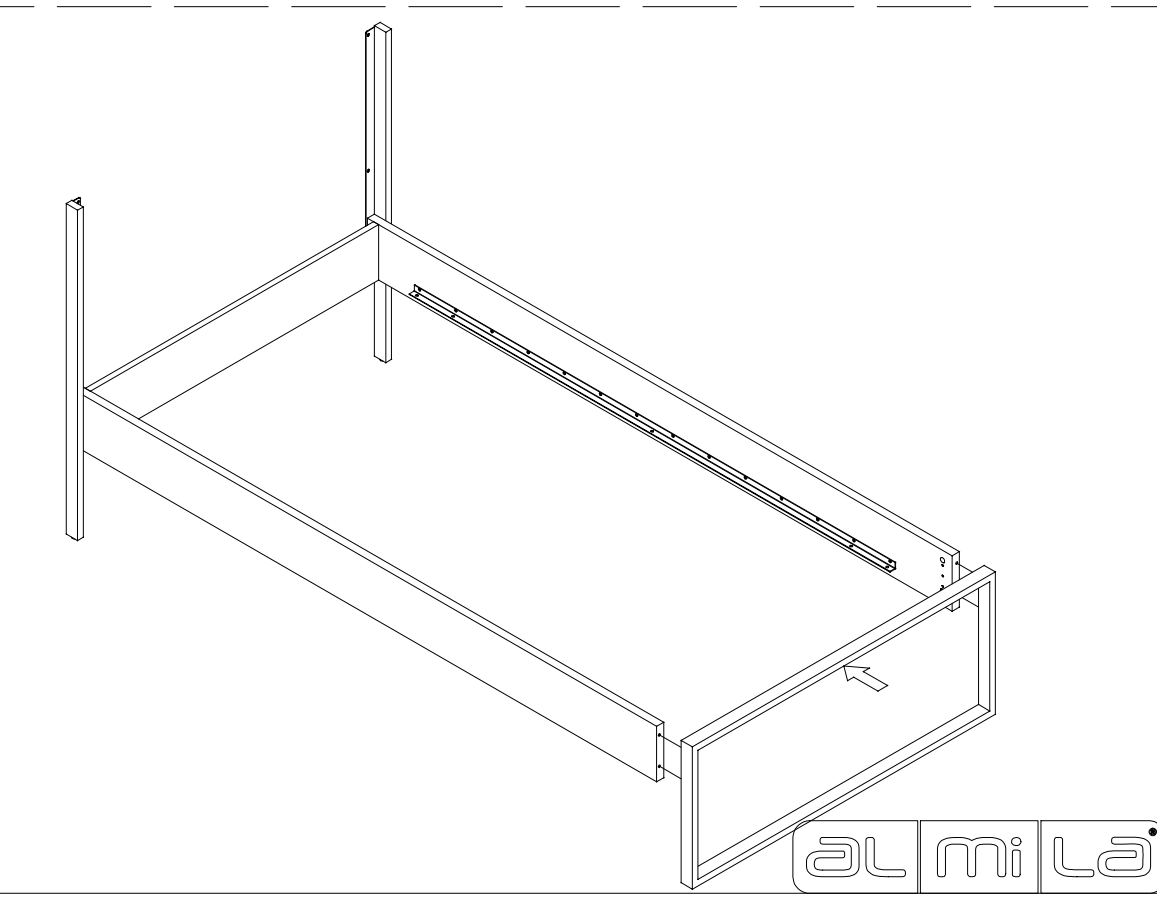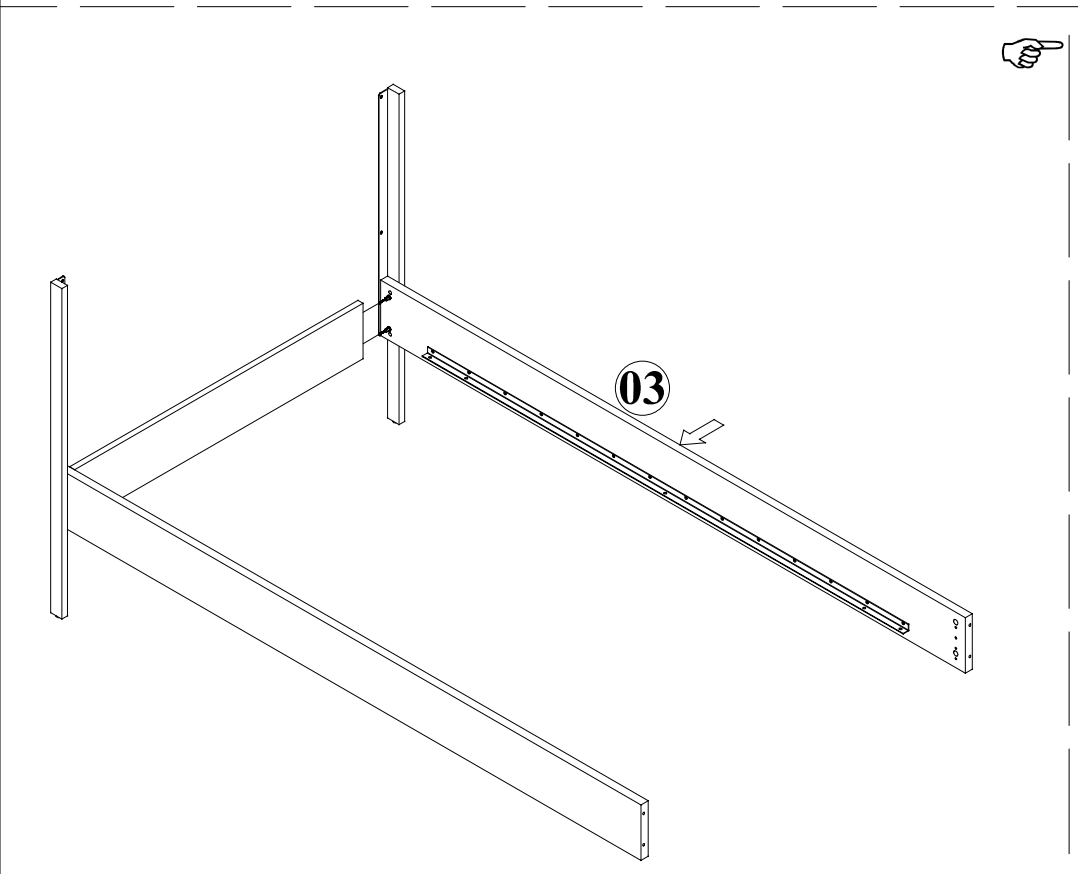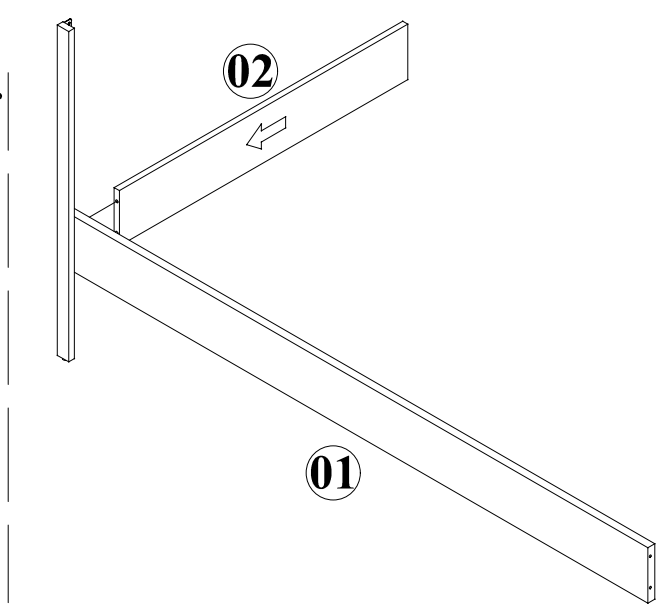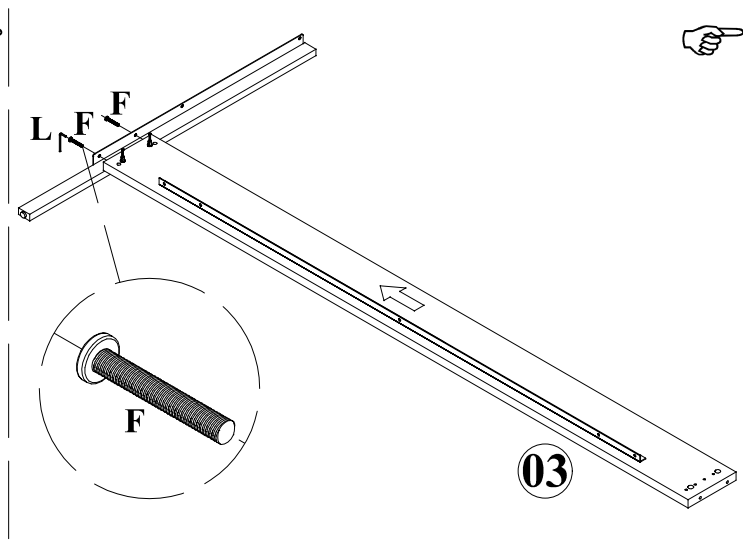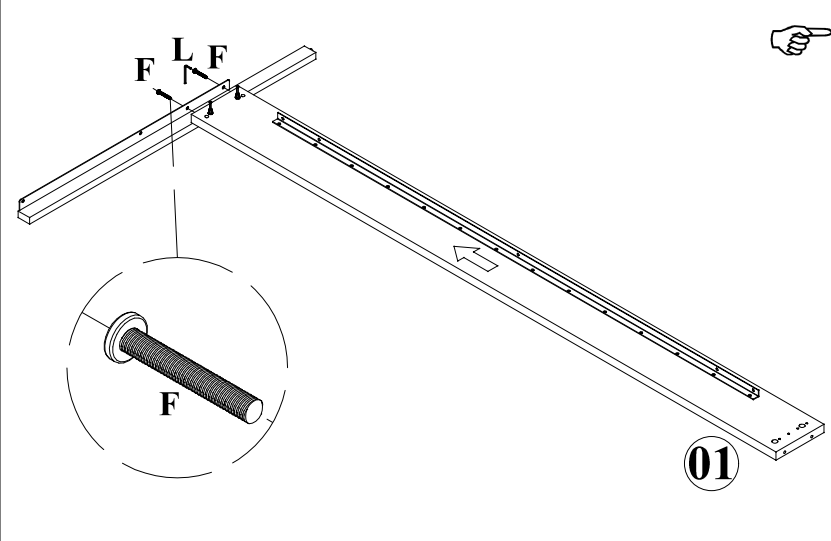

Montaj Talimatı (Assembly Instruction) -4

IRONY - HEADBOARD & BEDFRAME (90&100&120)-VN7

