


MONTE Headboard and Bedframe (All Sizes)

Assembly Instructions

MONTE Karyola (Tüm Ölçüler)

Montaj Talimatı

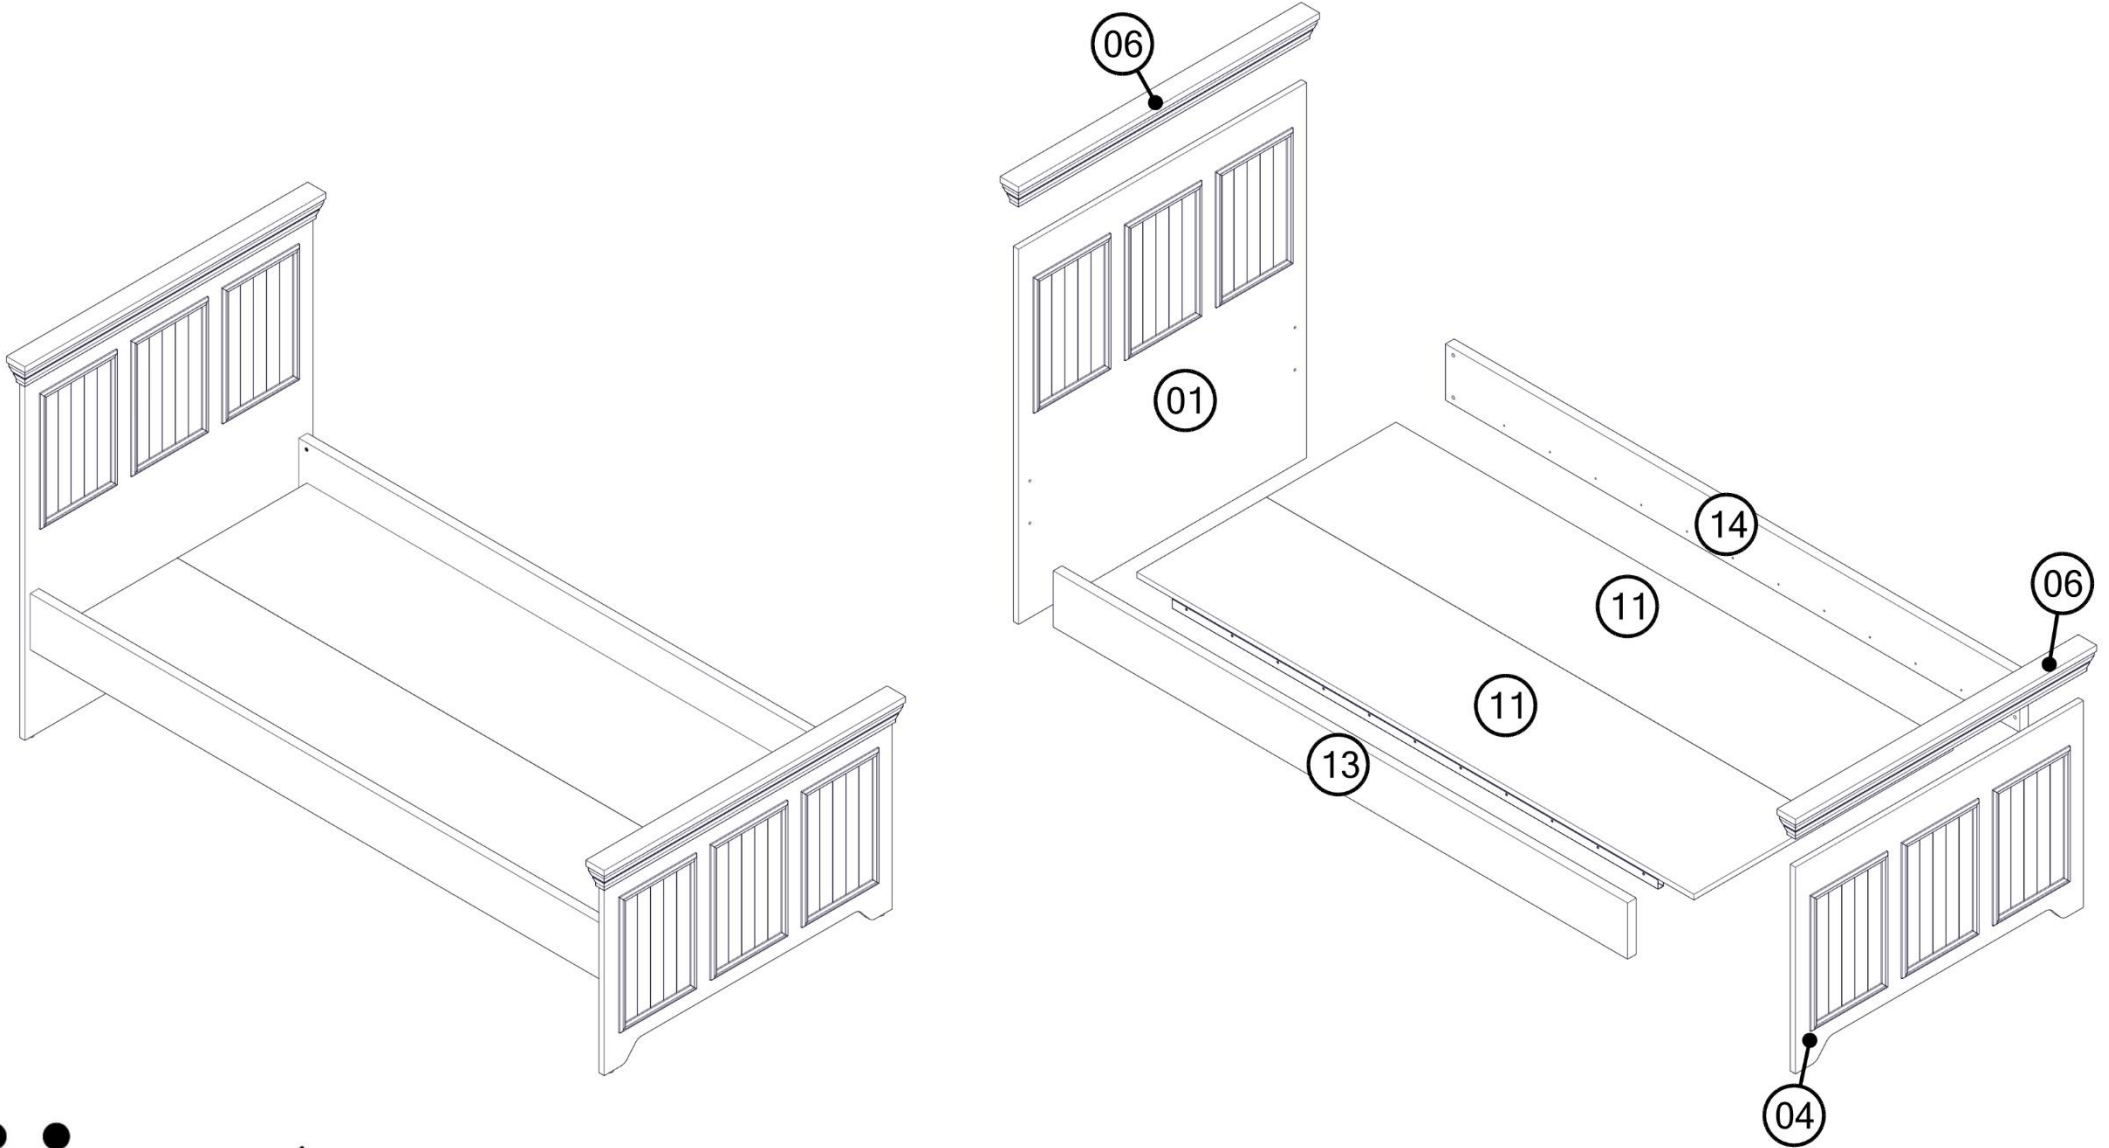


Pz3



PEOPLE NEEDED REQUIRED TOOL

Package Includes

Paket İçeriği

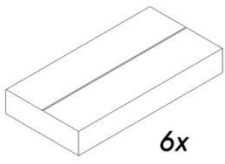

6x

Headboard and Bedframe Size 90X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1135.00	1008.00	28.00
04	625.00	1008.00	28.00
06	1054.00	78.00	64.00
11	1950.00	453.50	17.00
13	2010.00	170.00	25.00
14	2010.00	170.00	25.00

Headboard and Bedframe Size 100X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1135.00	1108.00	28.00
04	625.00	1108.00	28.00
06	1154.00	78.00	64.00
11	1950.00	503.50	17.00
13	2010.00	170.00	25.00
14	2010.00	170.00	25.00

Headboard and Bedframe Size 120X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1135.00	1308.00	28.00
04	625.00	1308.00	28.00
06	1354.00	78.00	64.00
11	1950.00	603.50	17.00
13	2010.00	170.00	25.00
14	2010.00	170.00	25.00




A

4x



B

12x



C

4x



D

22x



E

4x



F

4x




G

2x




H


1x

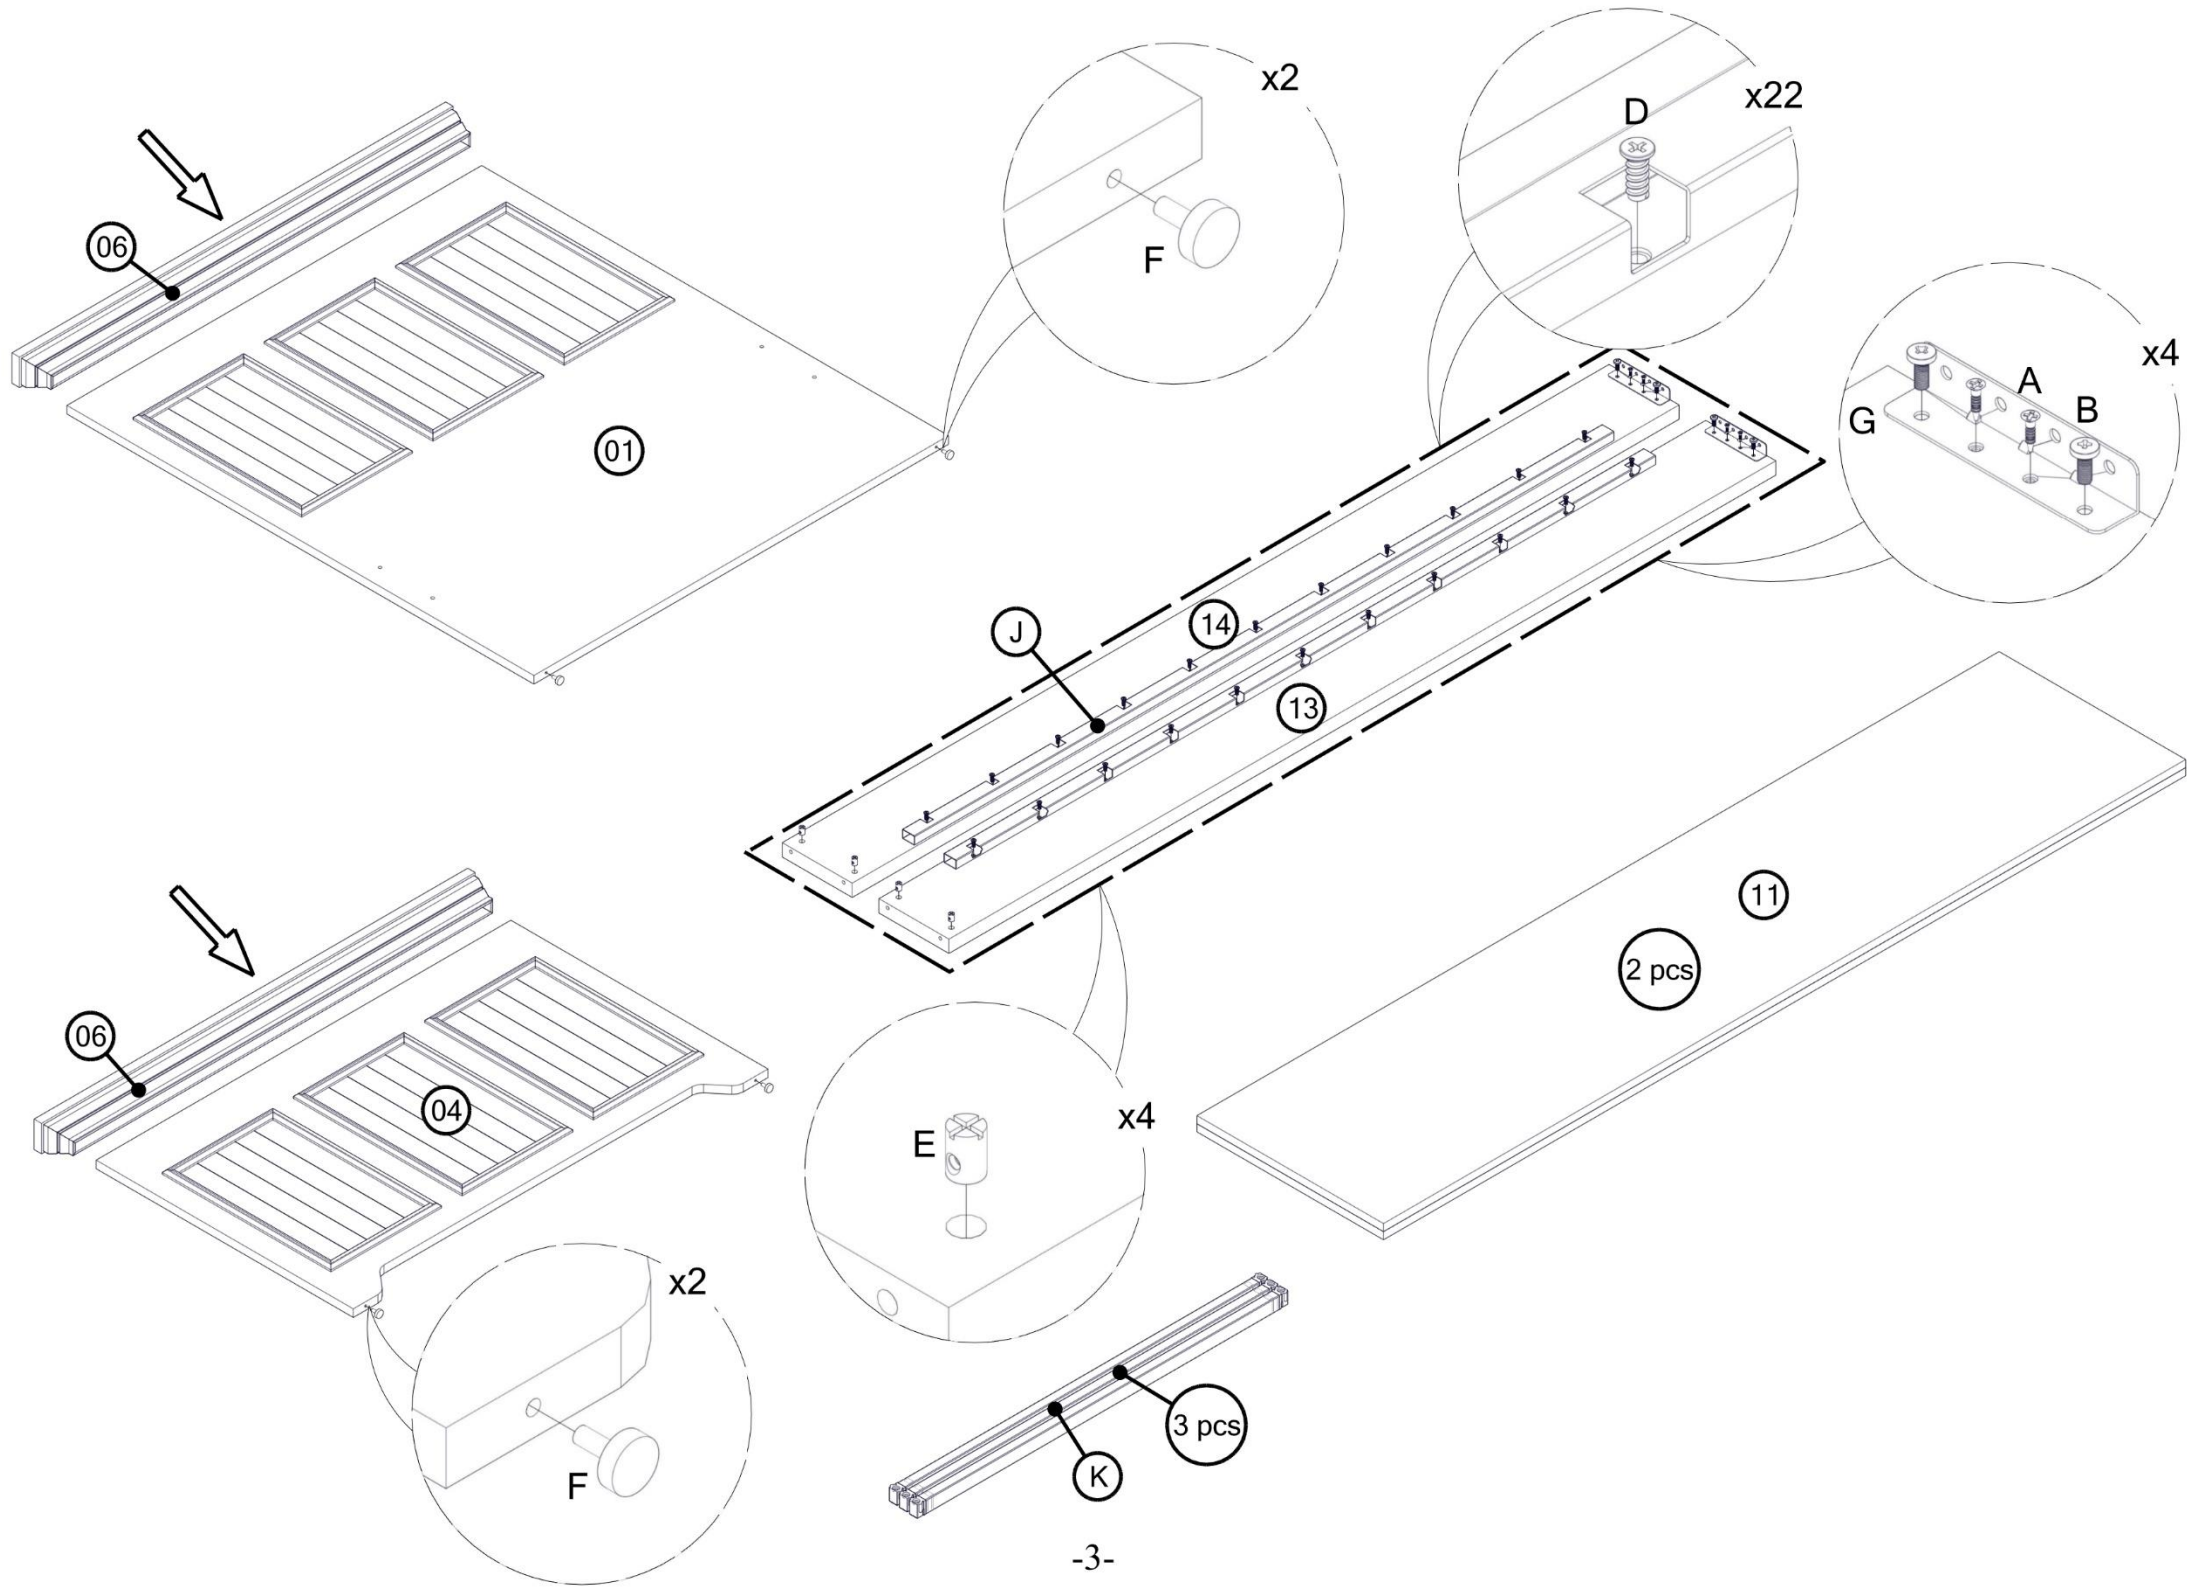


1

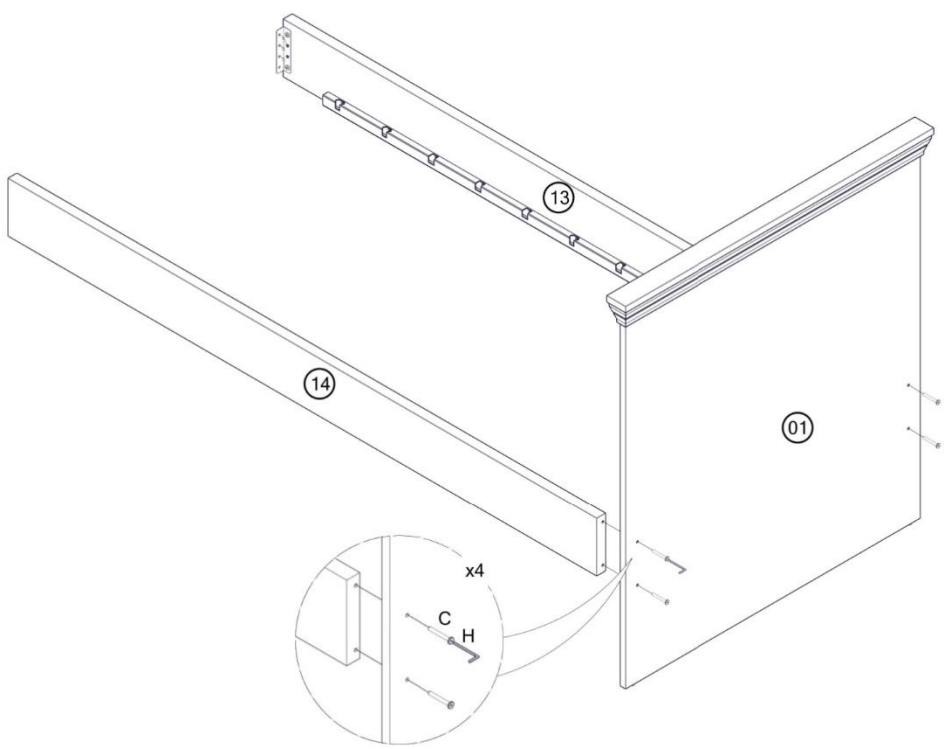

2

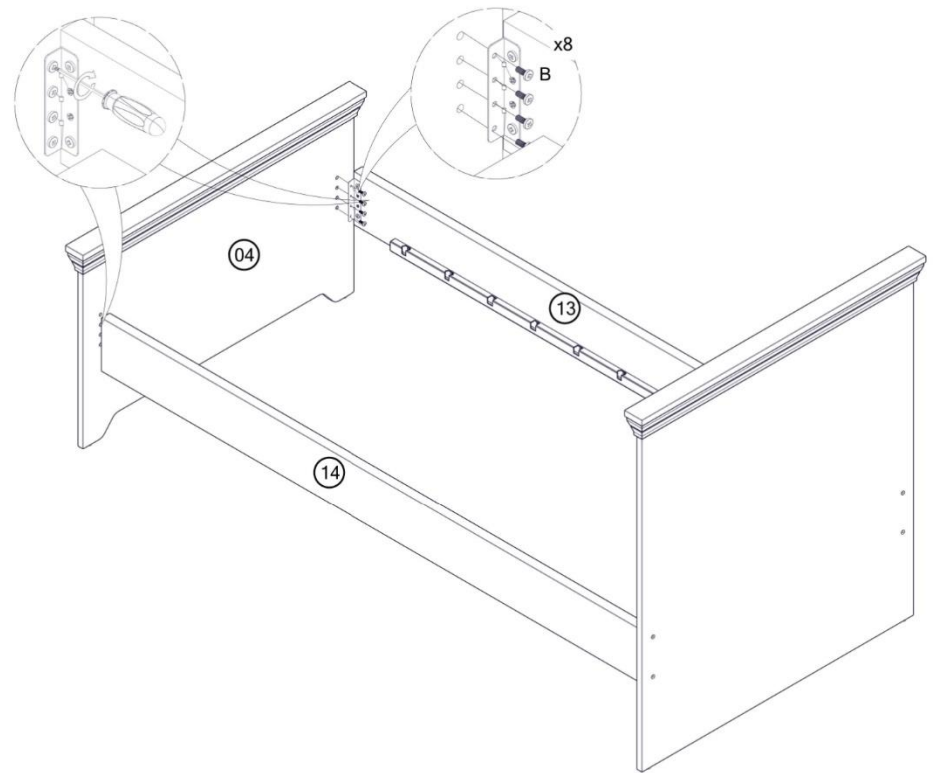

3

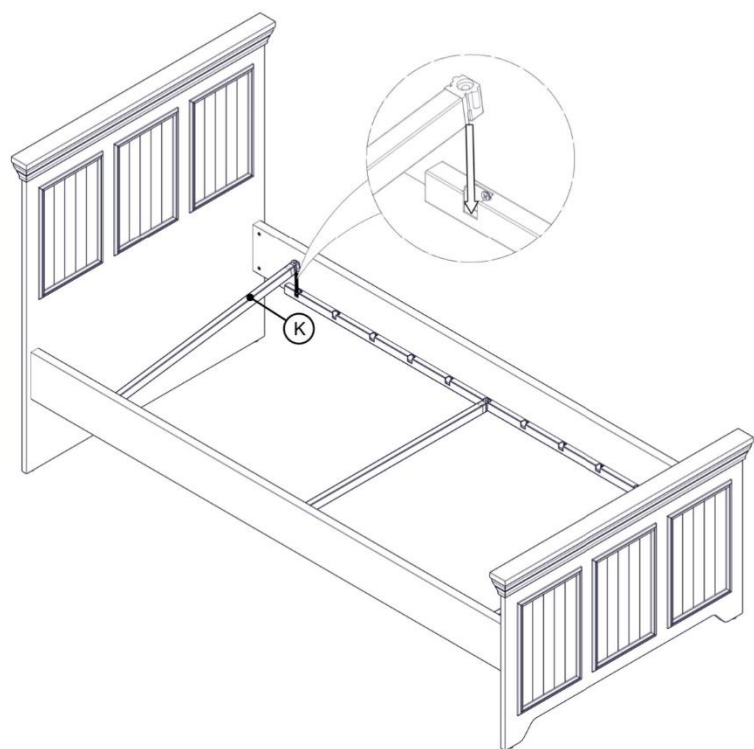

4

