


SENTO Headboard and Bedframe (All Sizes)

Assembly Instructions

SENTO Karyola (Tüm Ölçüler)

Montaj Talimatı

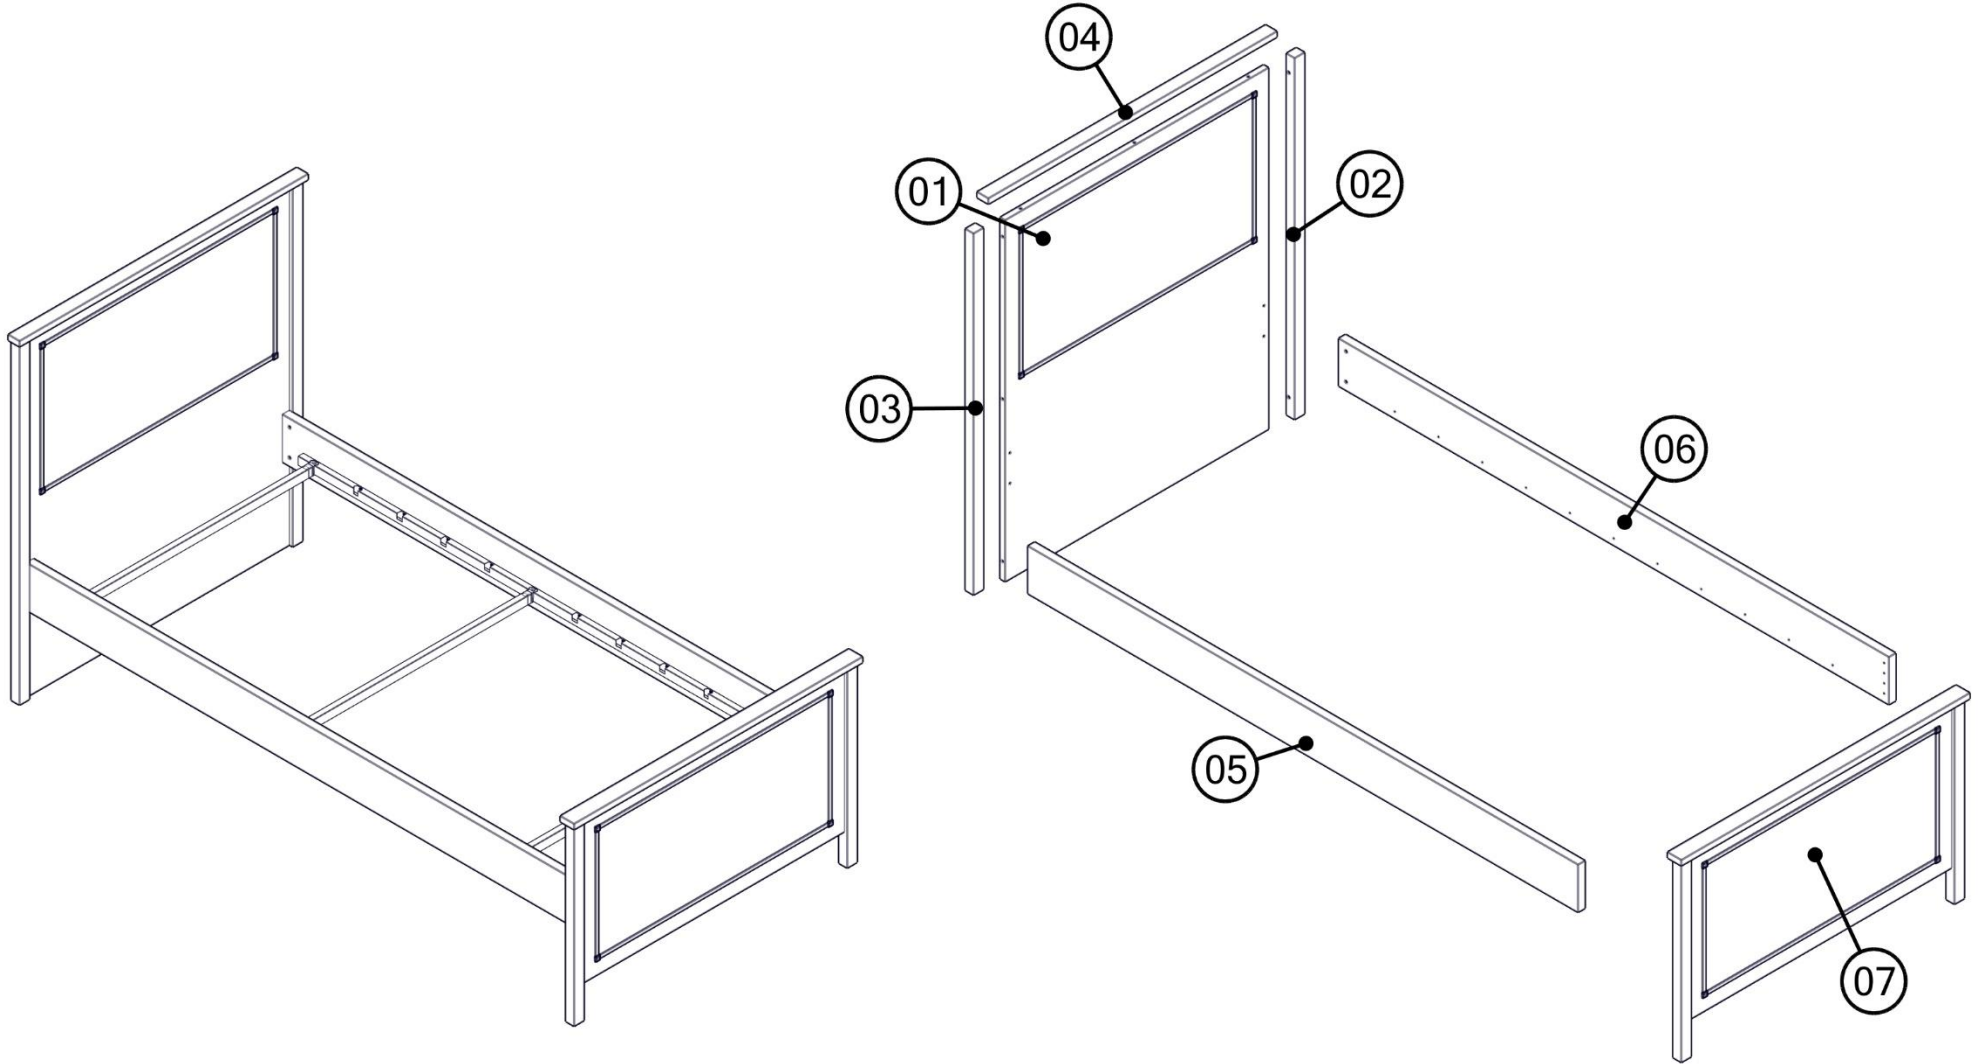


Pz3



PEOPLE NEEDED REQUIRED TOOL

Package Includes Paket İçeriği

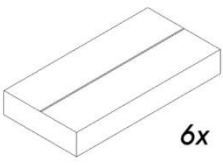

6x

Headboard and Bedframe Size 90X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1140.00	962.00	18.00
02	1140.00	36.00	30.00
03	1140.00	36.00	30.00
04	1054.00	41.00	18.00
05	2010.00	150.00	25.00
06	2010.00	150.00	25.00
07	648.00	1054.00	50.00

Headboard and Bedframe Size 100X200 Parts

N	L (mm)	W(mm)	T(mm)
01	1140.00	1062.00	18.00
02	1140.00	36.00	30.00
03	1140.00	36.00	30.00
04	1154.00	41.00	18.00
05	2010.00	150.00	25.00
06	2010.00	150.00	25.00
07	648.00	1154.00	50.00

Headboard and Bedframe Size 120X200 Parts

N	L (mm)	W(mm)	T(mm)
01	1140.00	1262.00	18.00
02	1140.00	36.00	30.00
03	1140.00	36.00	30.00
04	1354.00	41.00	18.00
05	2010.00	150.00	25.00
06	2010.00	150.00	25.00
07	648.00	1354.00	50.00




A

22x



B

8x



C

4x



D

8x



E

9x




F

4x



G

9x

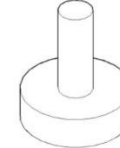

H

4x



I

2x



J

1x



M

9x

