



Montaj Talimatı (Assembly Instruction) -1

MONTESSORI_(v01)

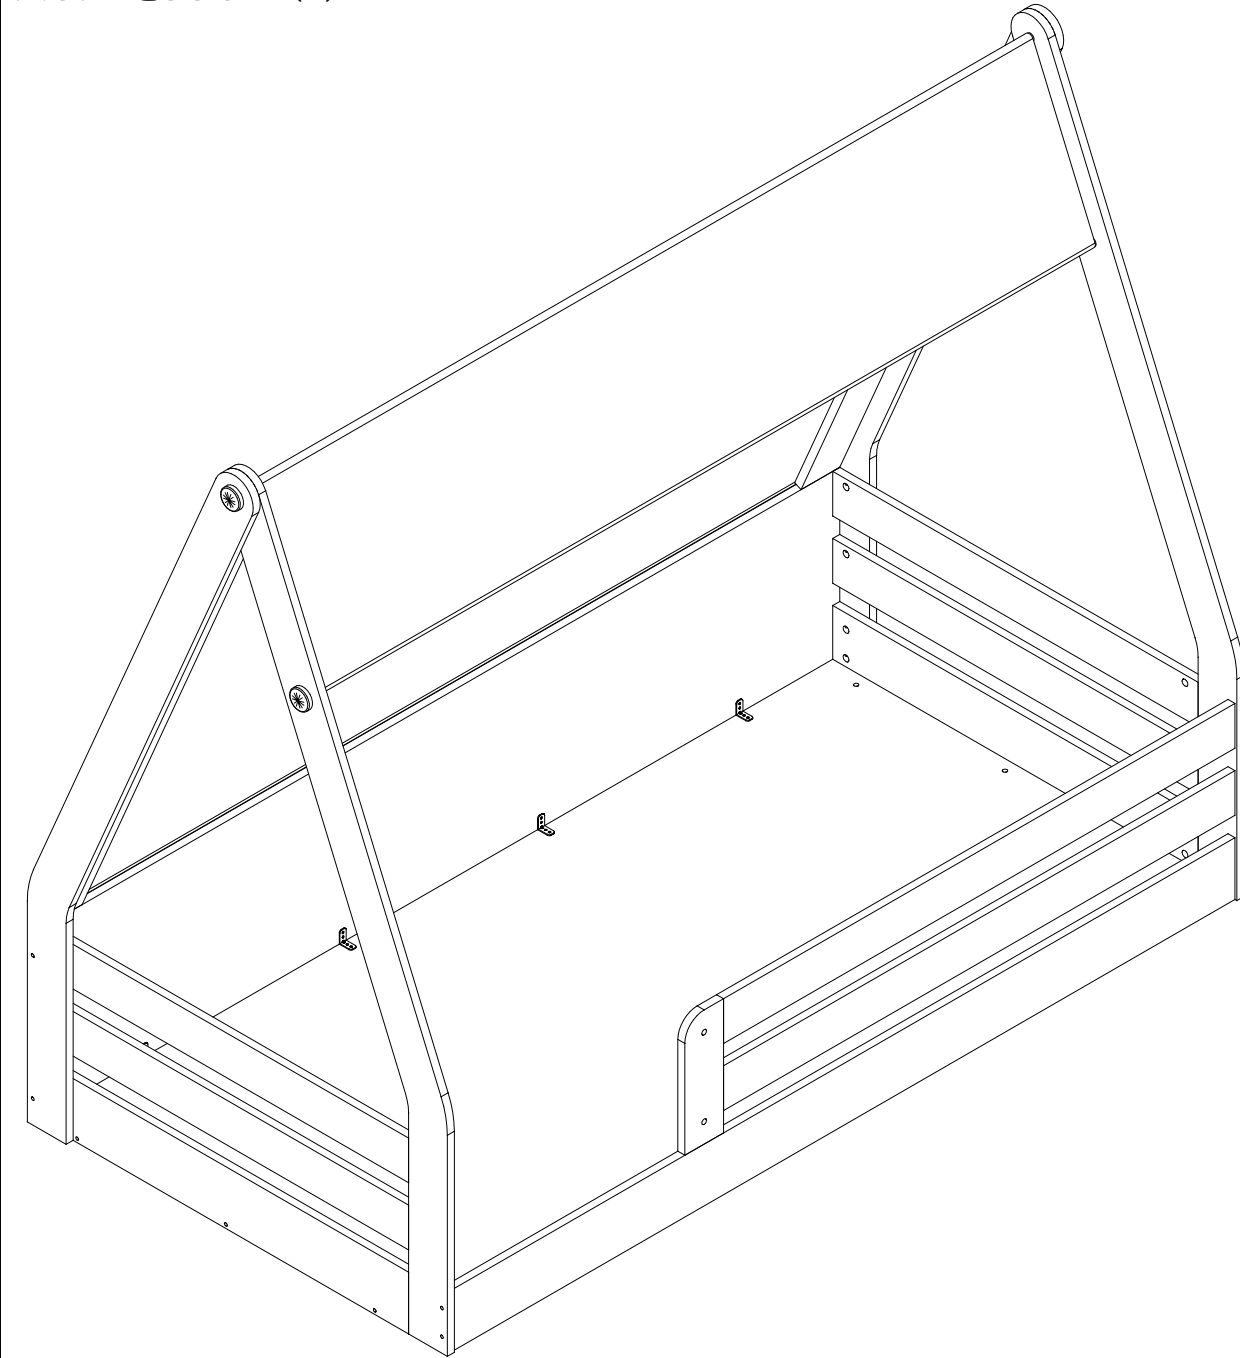


NO	W	x	L	x	H
21	1930	x	990	x	18
22	1966	x	438	x	18
23	913	x	138	x	18
24	913	x	100	x	18
25	1930	x	138	x	18
26	1713	x	100	x	18
27	1713	x	100	x	18
28	1713	x	100	x	18
29	1713	x	100	x	18
30	300	x	100	x	18
31	1320	x	100	x	18
32	1238	x	100	x	18

A	B	C		
13	21	33		
E	F	G	H	J
14	2	14	2	45
K	L	M	N	
9	8	8	4	
O	P			
1	4			

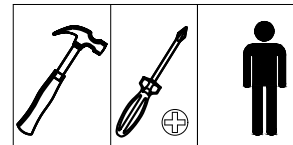


Montaj Talimatı (Assembly Instruction) -2

MONTESSORI-(V01)

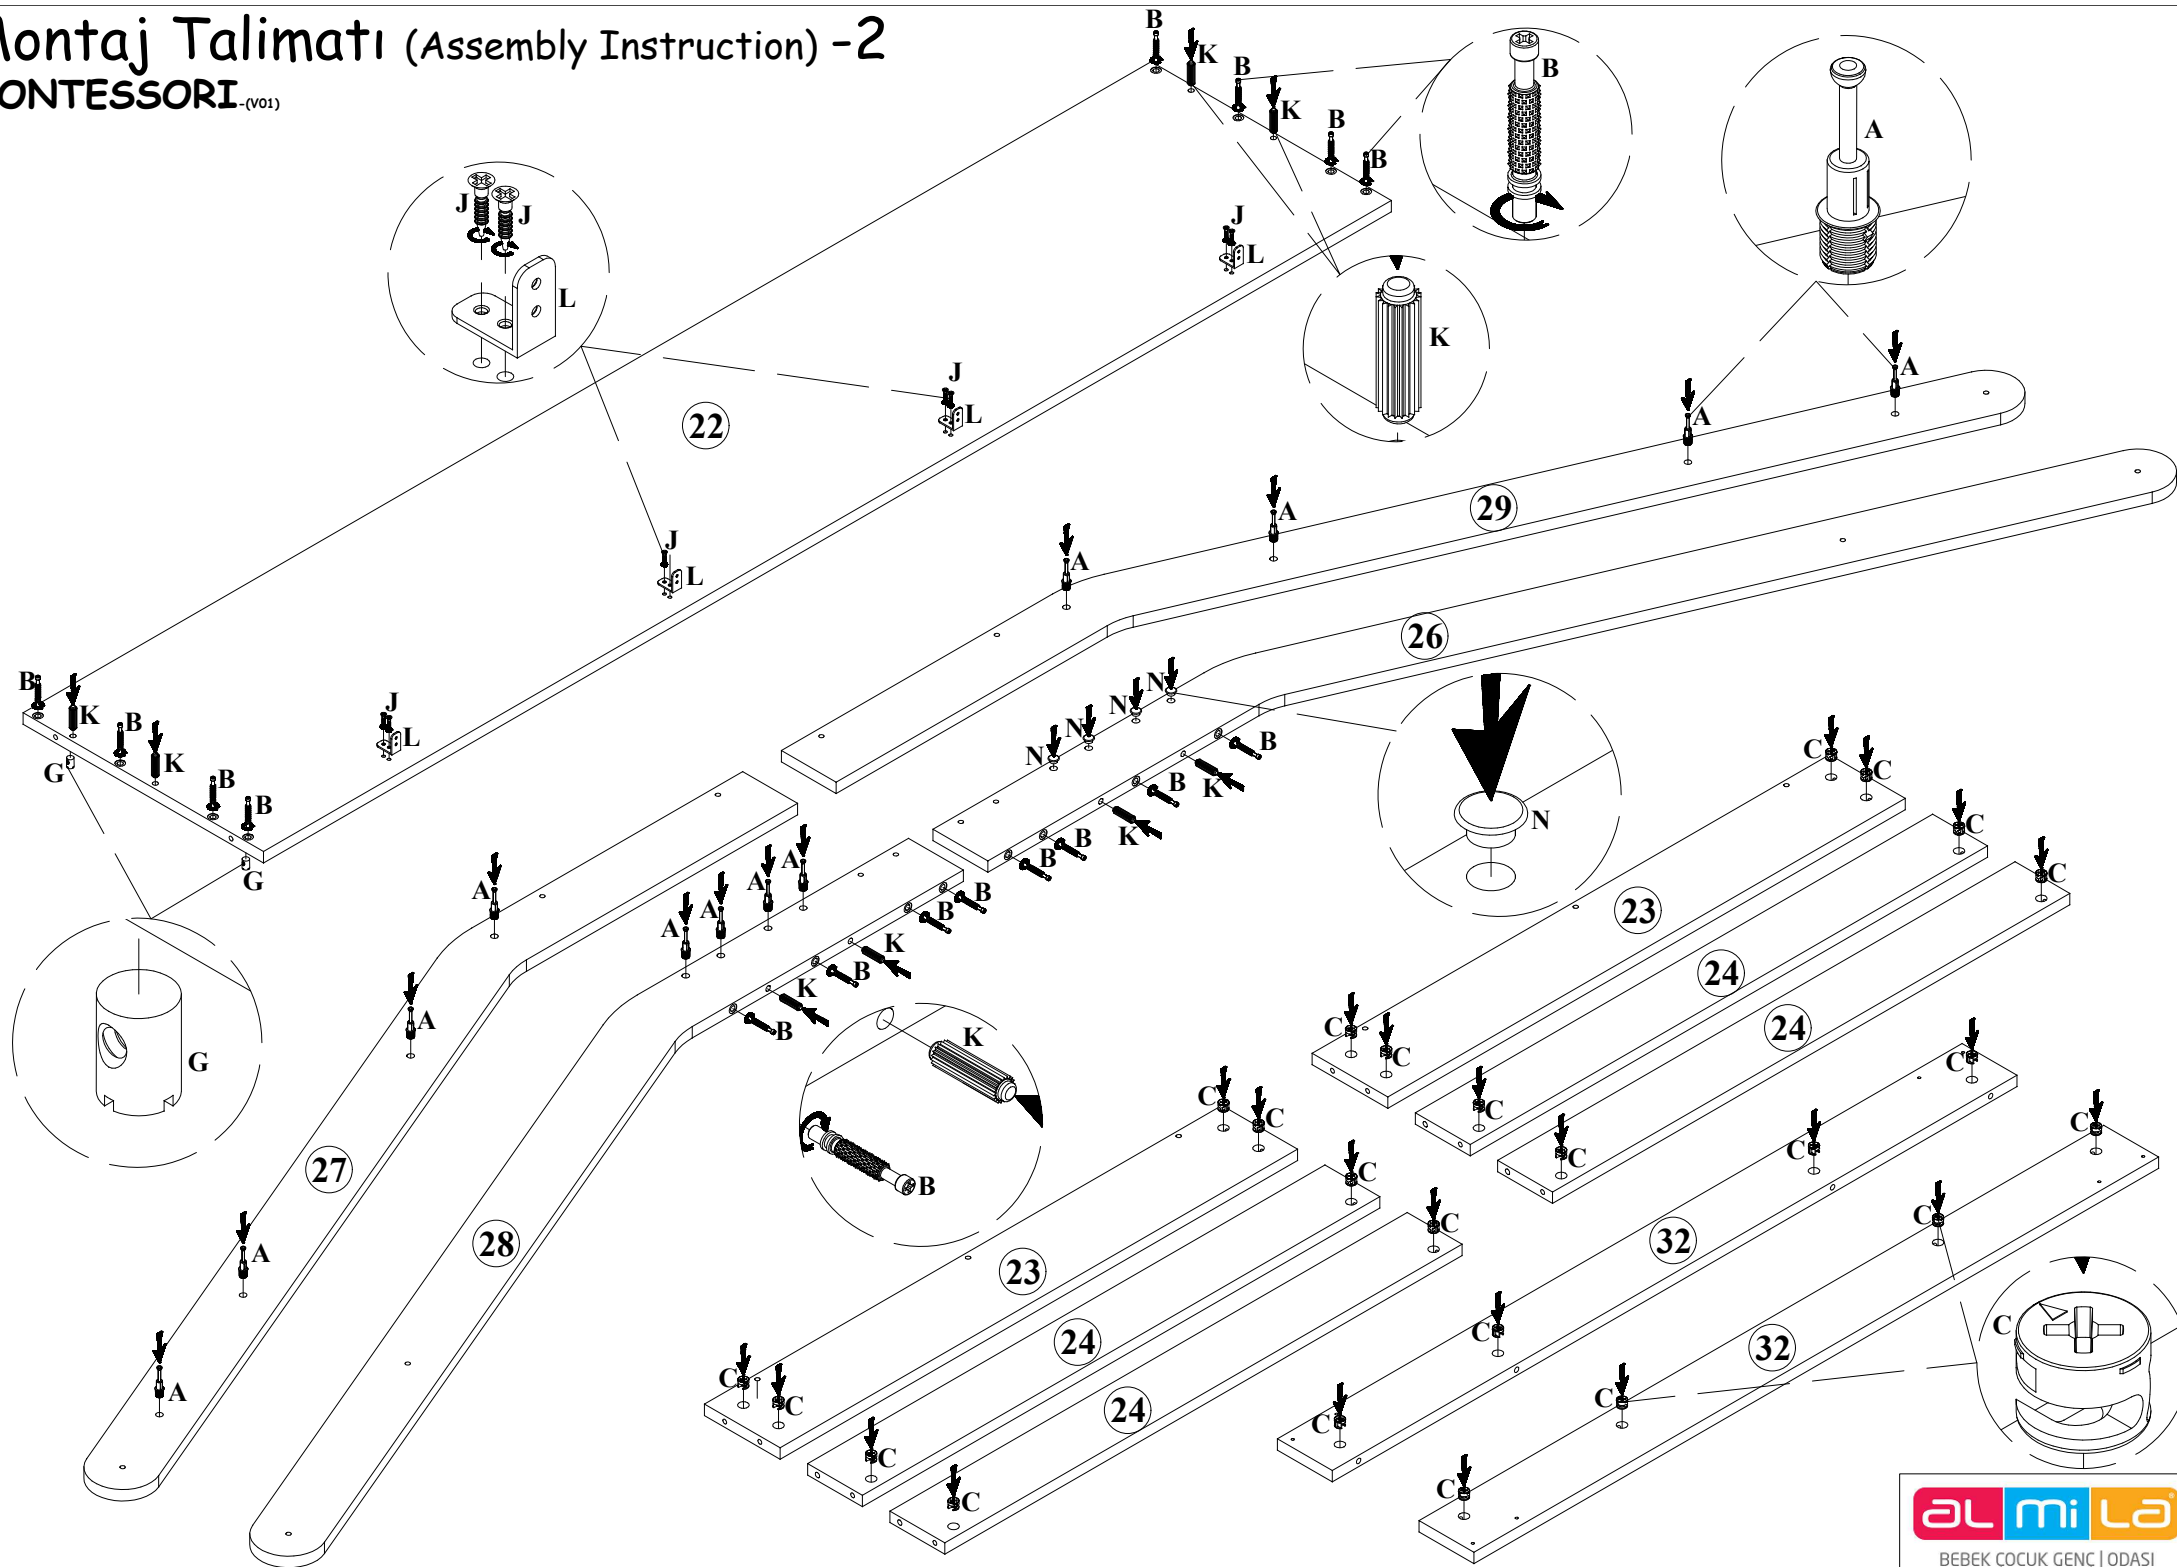







Montaj Talimatı (Assembly Instruction) -3

MONTESSORI_{-(V01)}

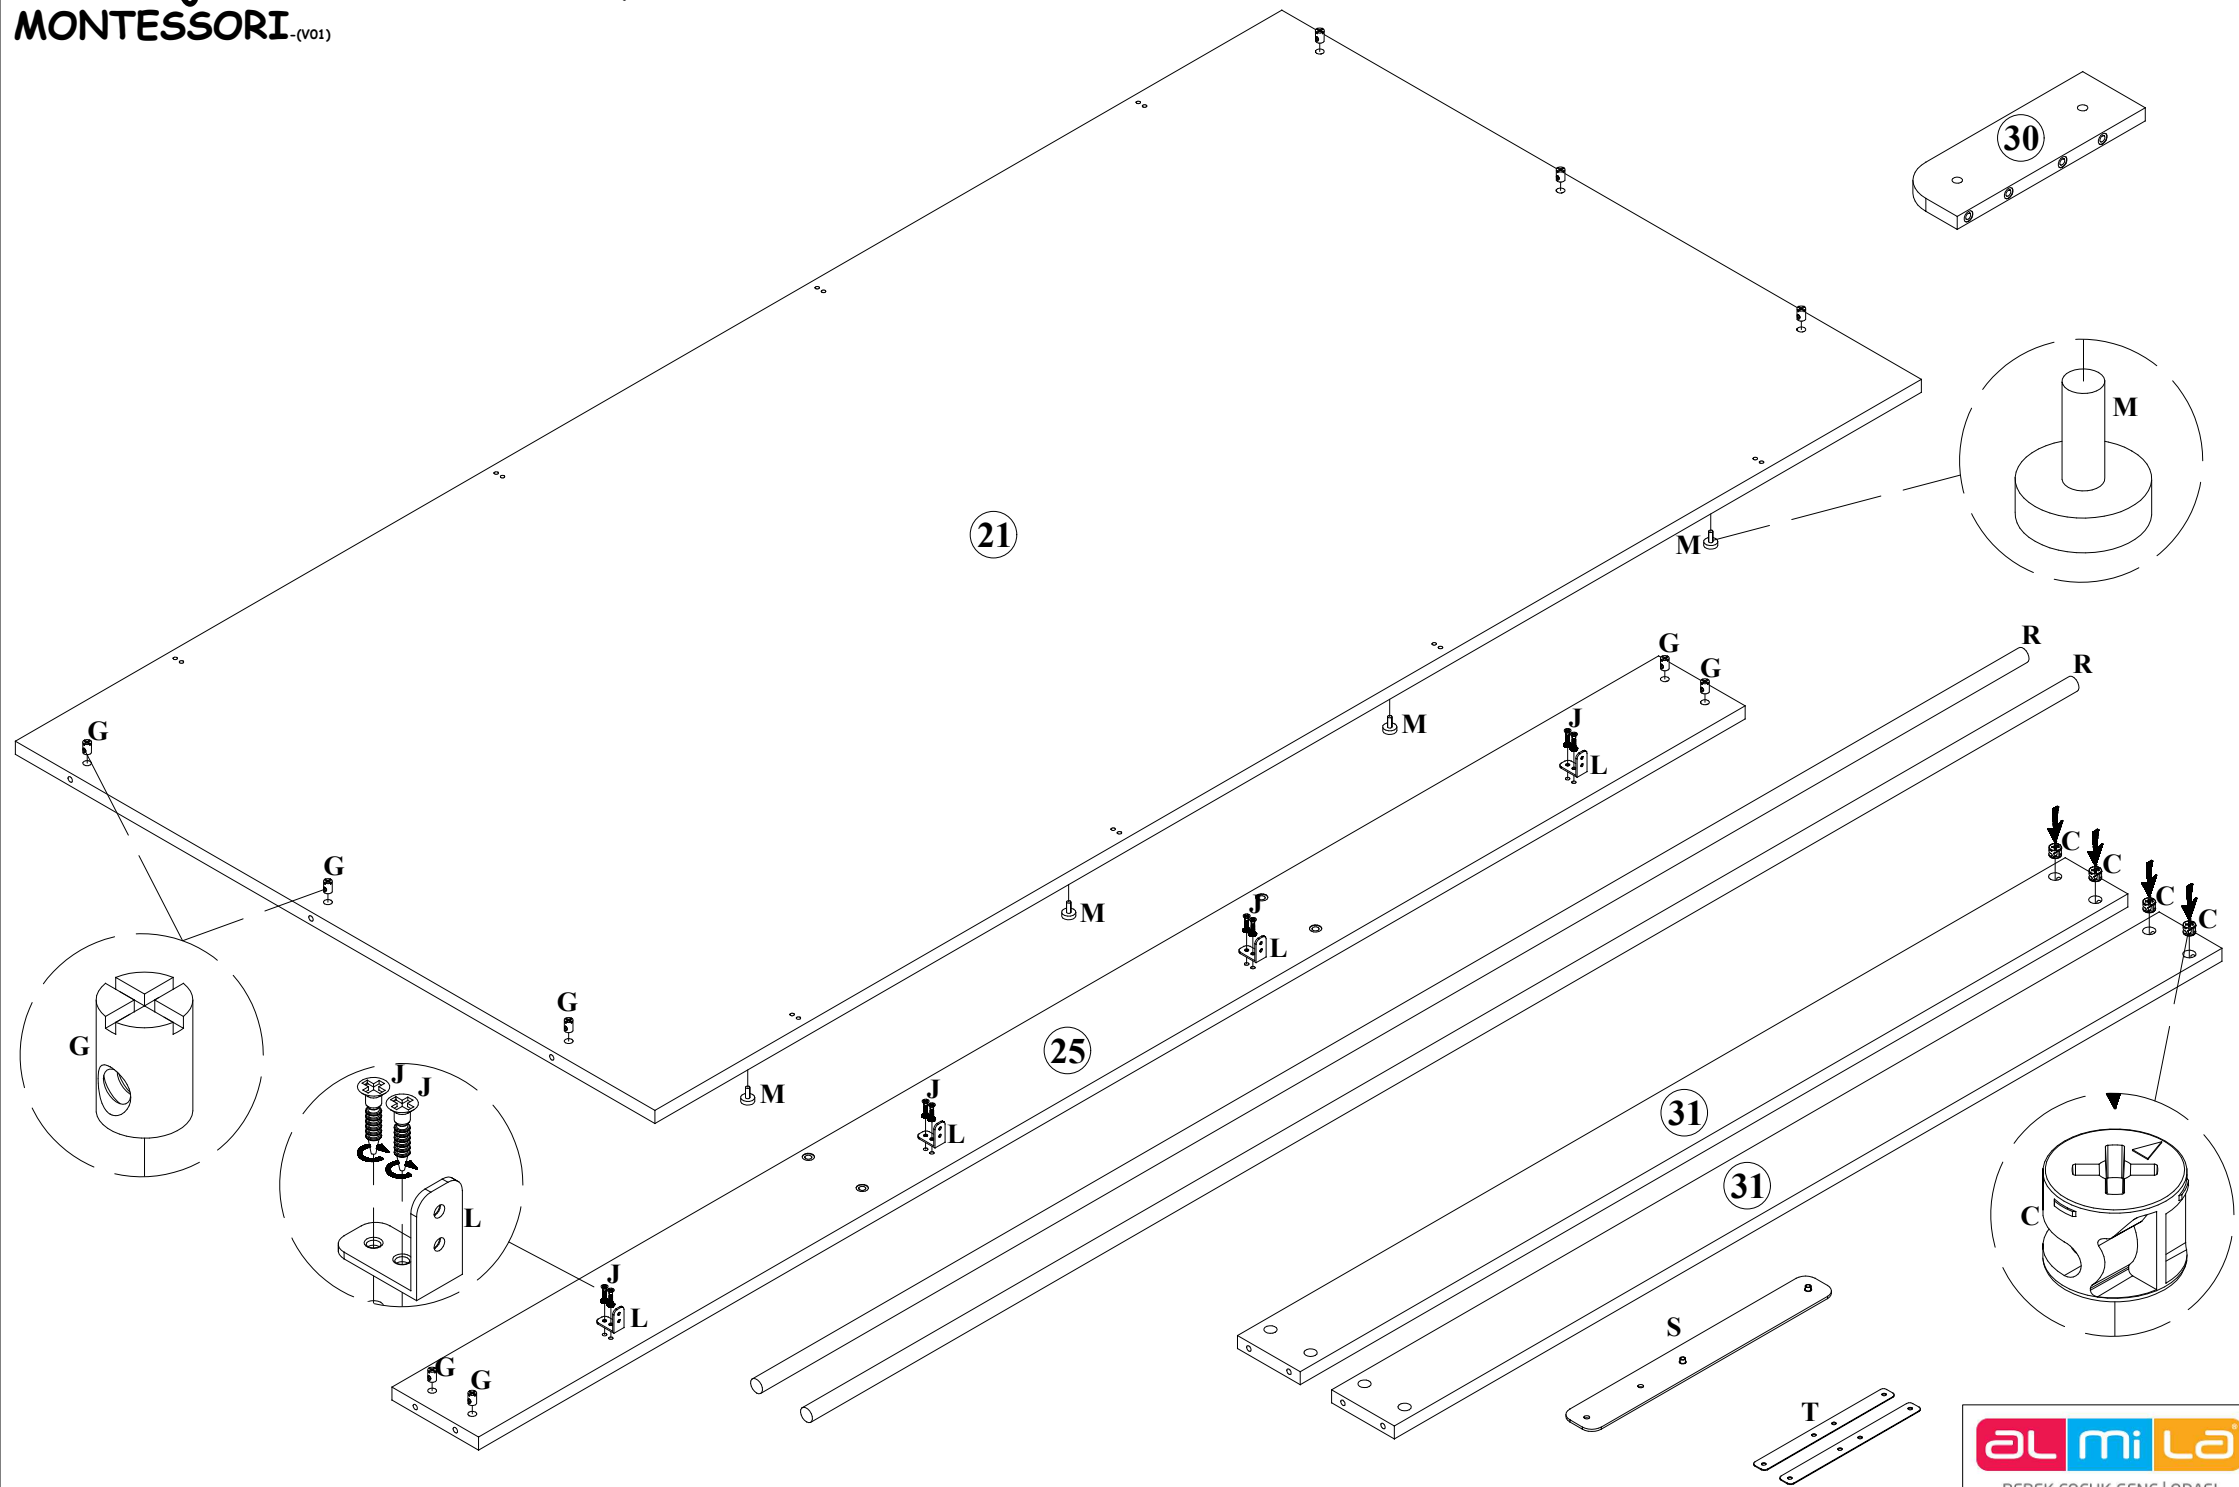







Montaj Talimatı (Assembly Instruction) -4

MONTESSORI-(v01)

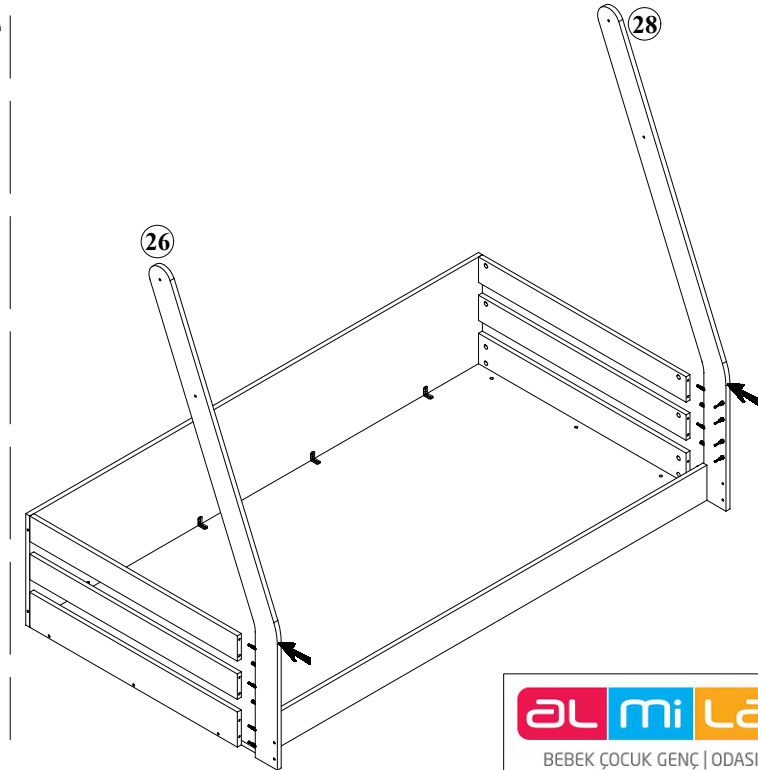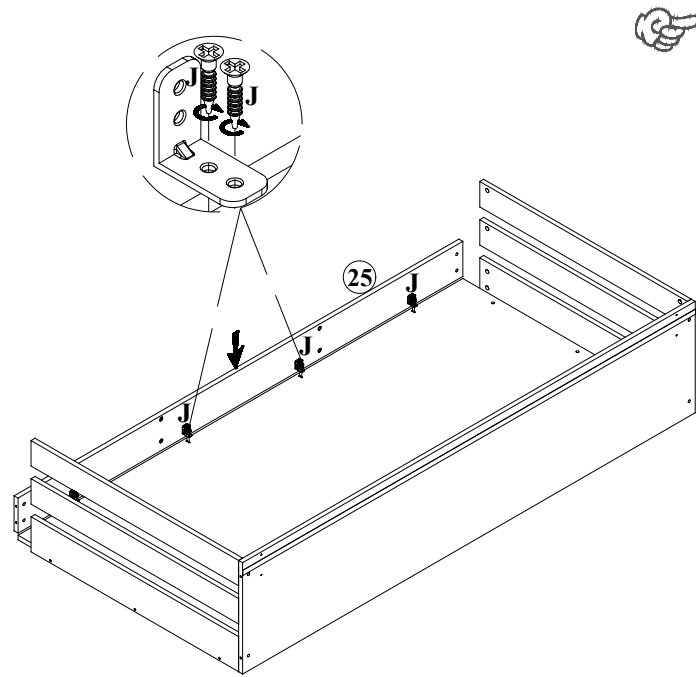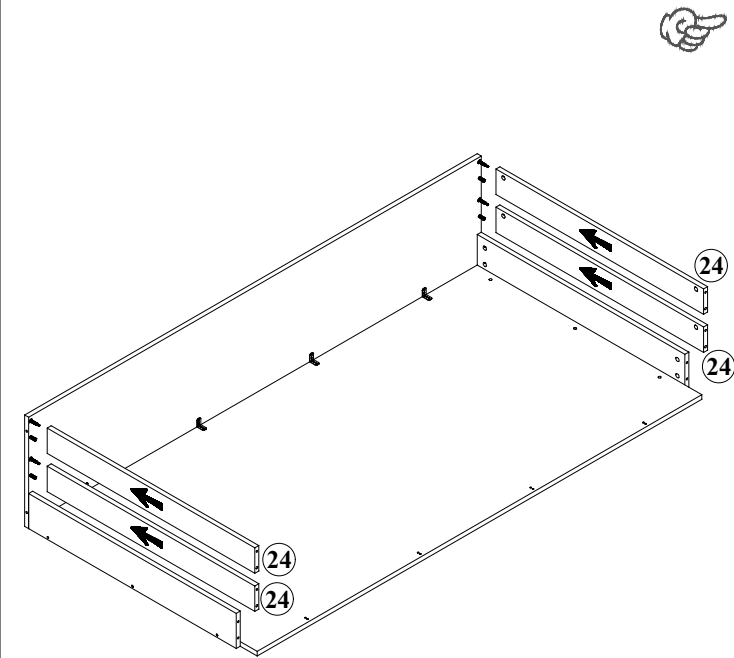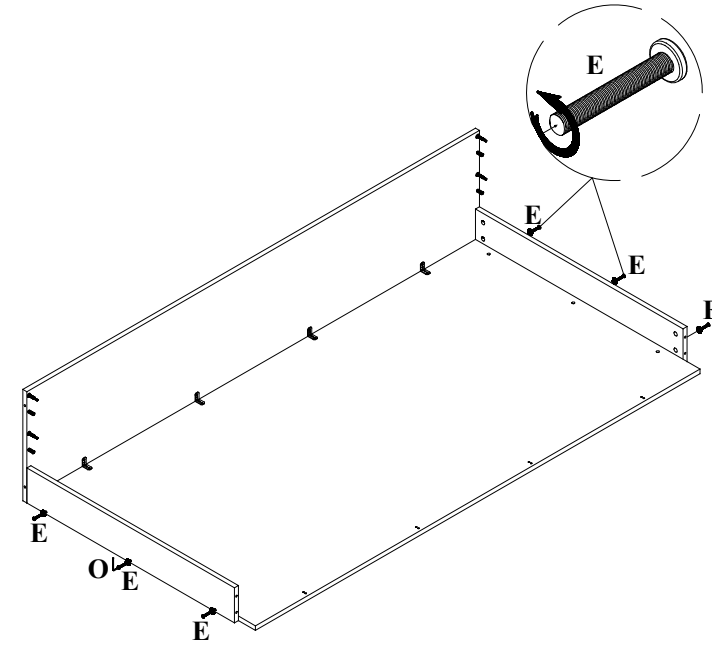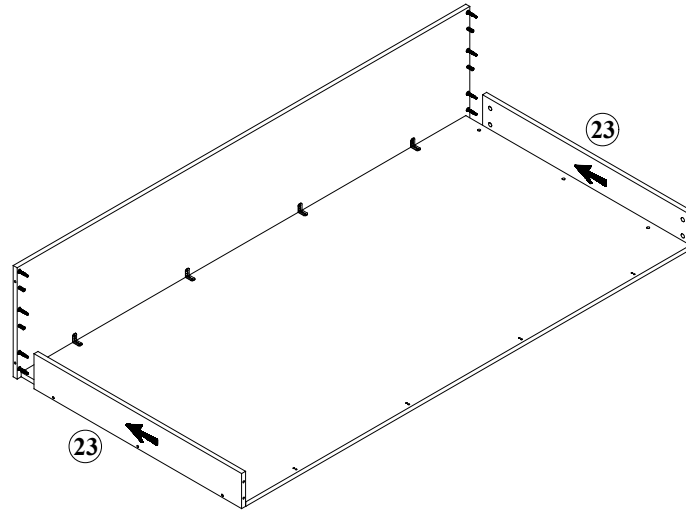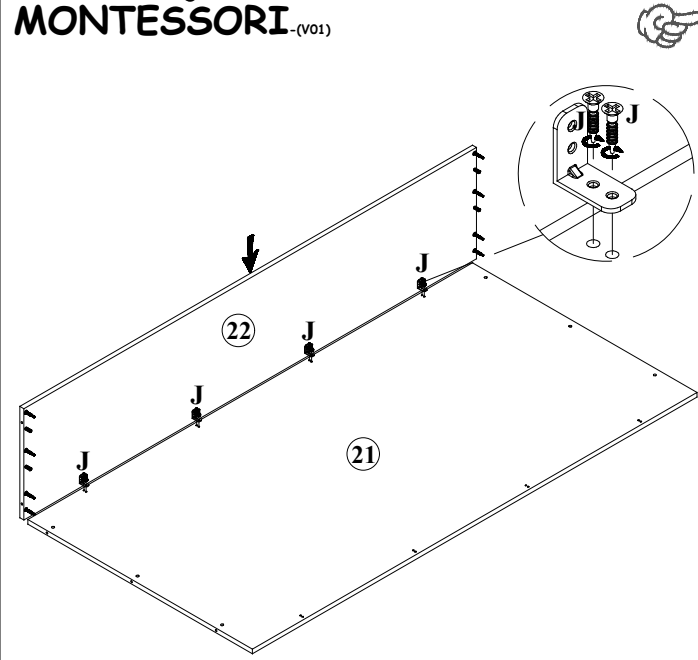

Montaj Talimatı (Assembly Instruction) -5

MONTESSORI-(v01)

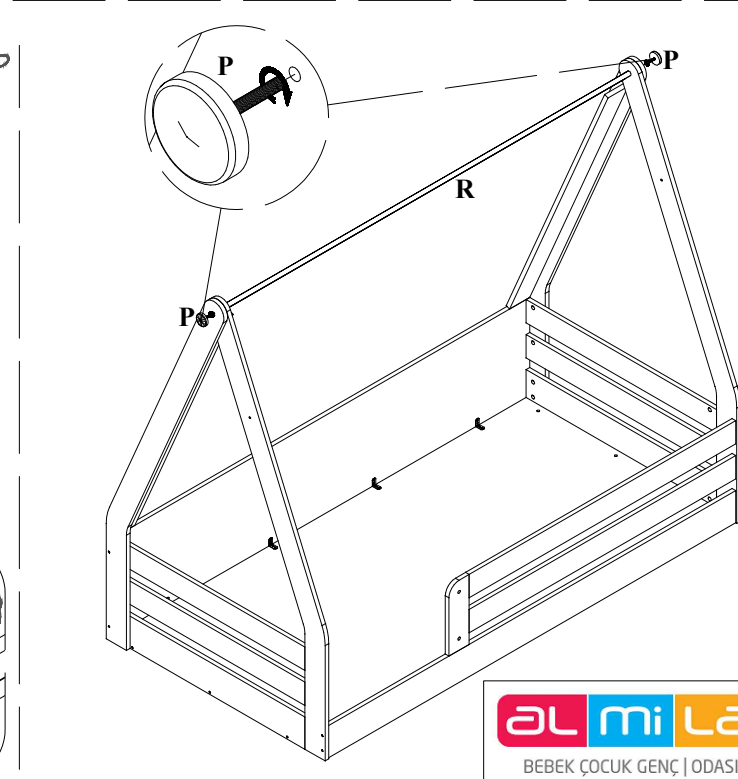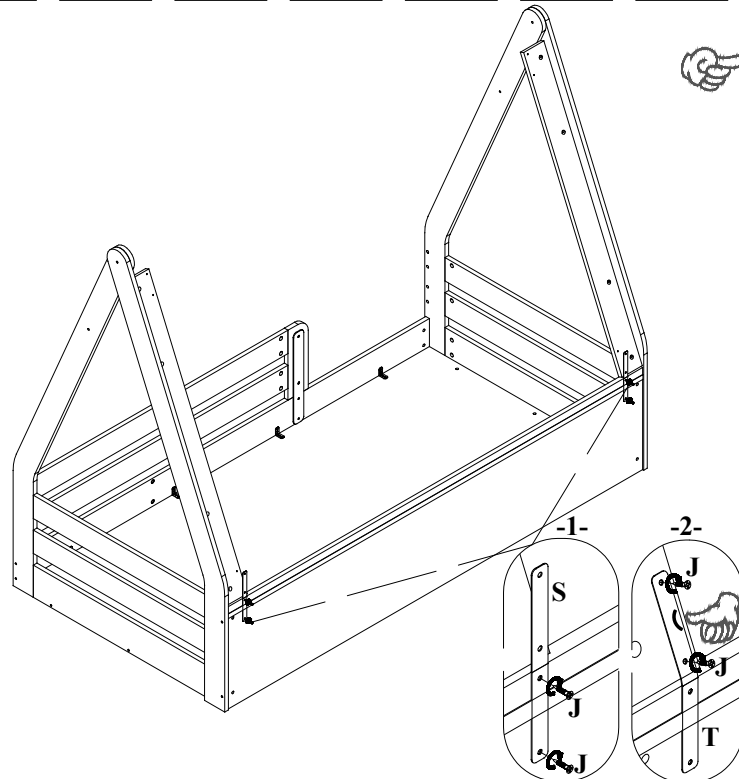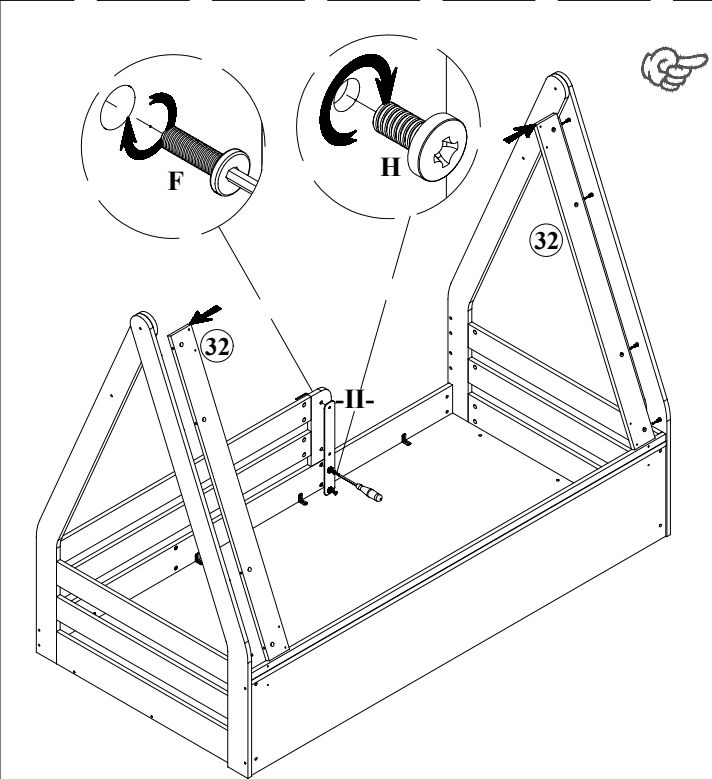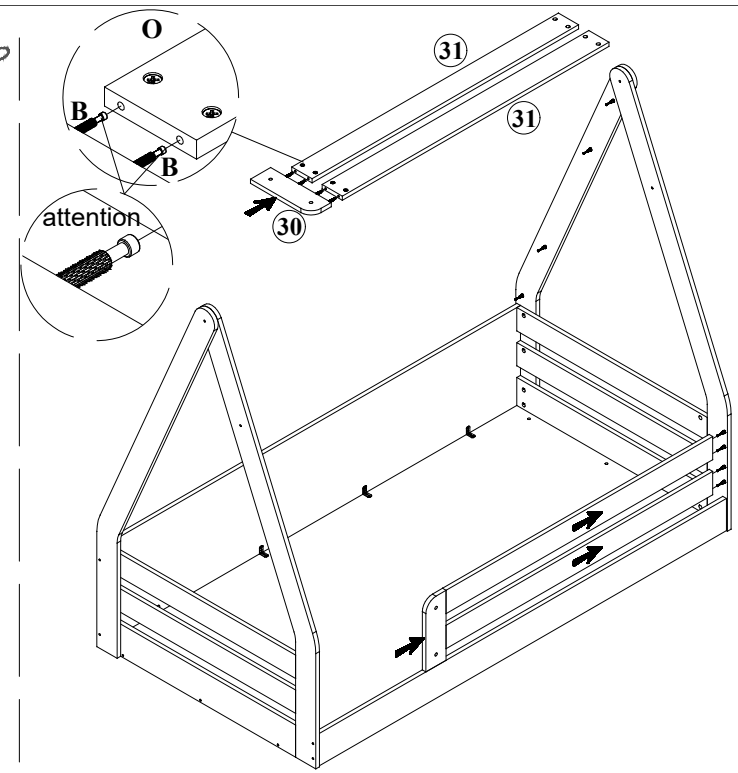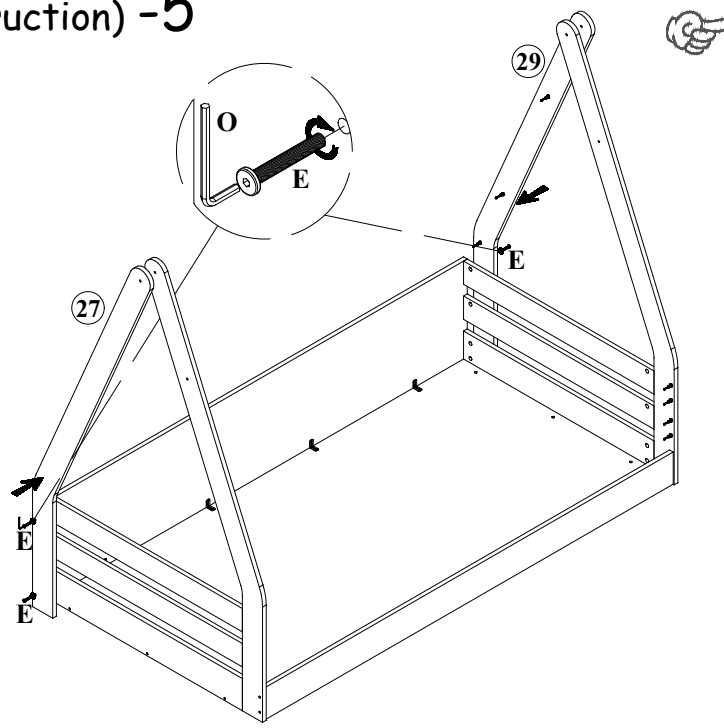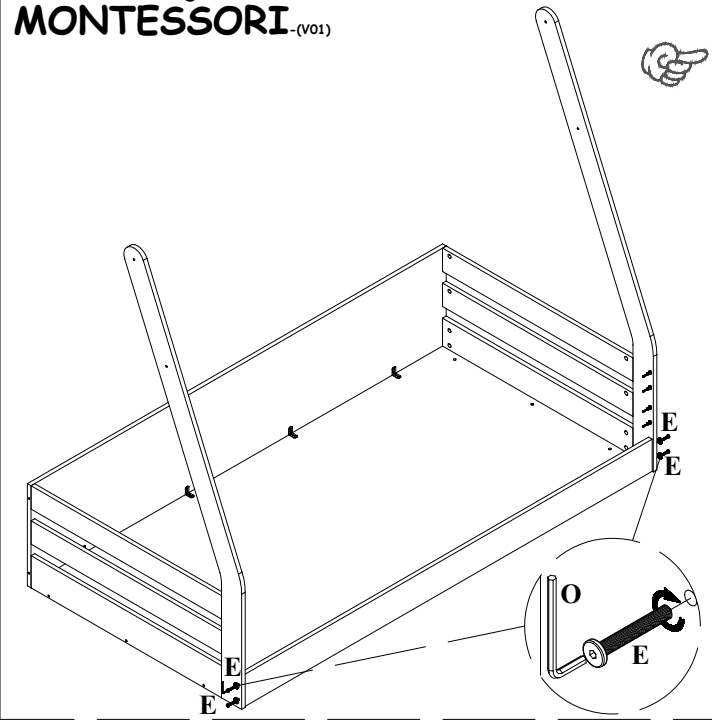

Montaj Talimatı (Assembly Instruction) -6

MONTESSORI_{-v01}

