


# Montaj Talimatı (Assembly Instruction) -1

## MONTE - TODDLER BED - (V02)

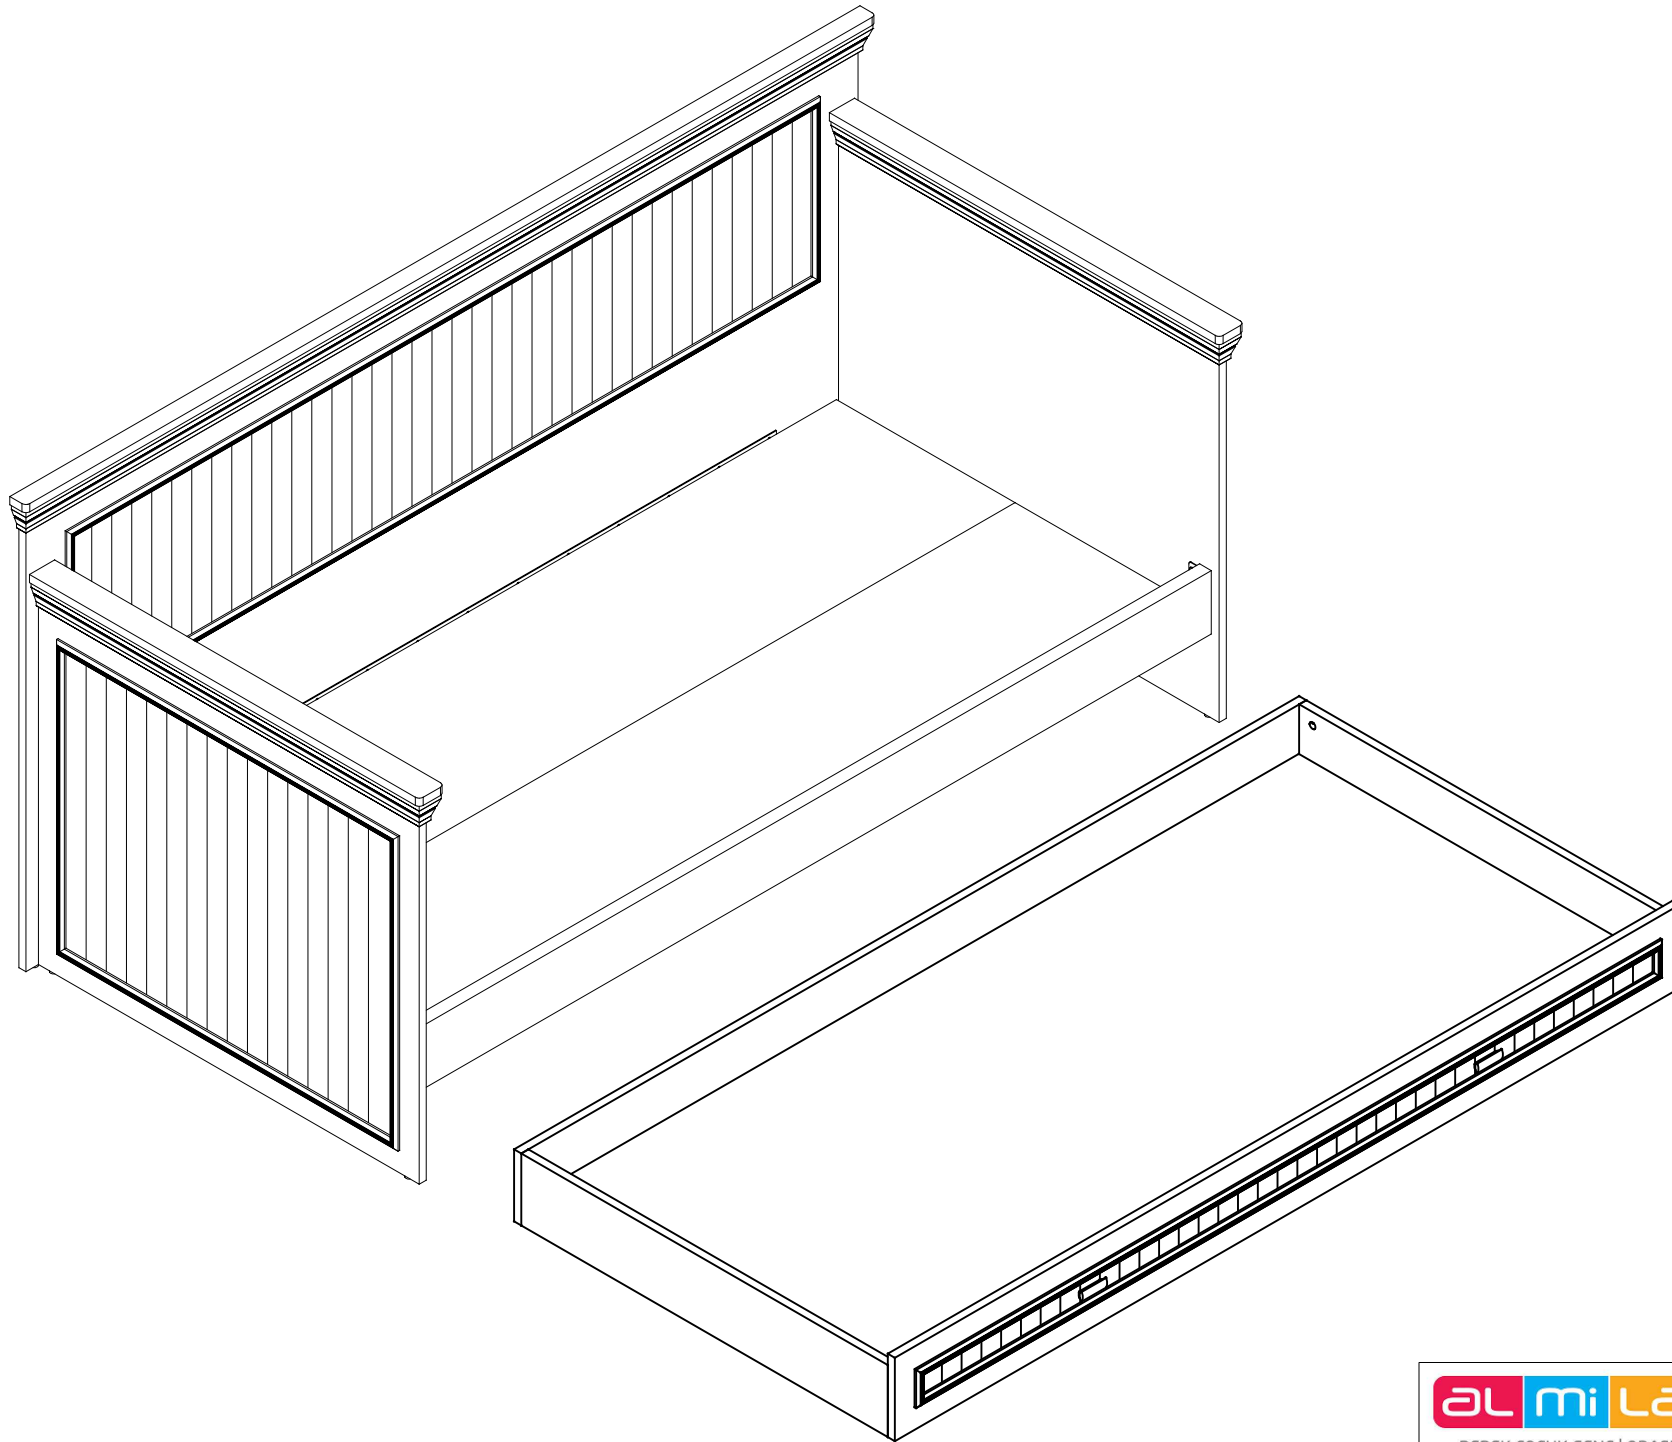


A0-1	A0-2	C	D	E
4	4	6	2	112
F	G	H	J	K
6	28	2	7	1
L	M	N		
10	6	2		

CODE	N	W	x	L	x	H
P201.341801V10461	01	2166	x	1051	x	41
P401.341802V10461	02	854	x	970	x	18
P401.341803V10461	03	854	x	970	x	28
P401.341804V10461	04	2020	x	140	x	30
P401.341805V10611	05	2000	x	455	x	18
P301.341806V10467	06	994	x	64	x	78
P401.341807V10461	07	2002	x	184	x	28
P401.341808V10461	08	934	x	159	x	18
P401.341809V10461	09	1962	x	934	x	18
P401.341810V10461	10	2002	x	159	x	18







# Montaj Talimatı (Assembly Instruction) -2

## MONTE - TODDLER BED - (V02)

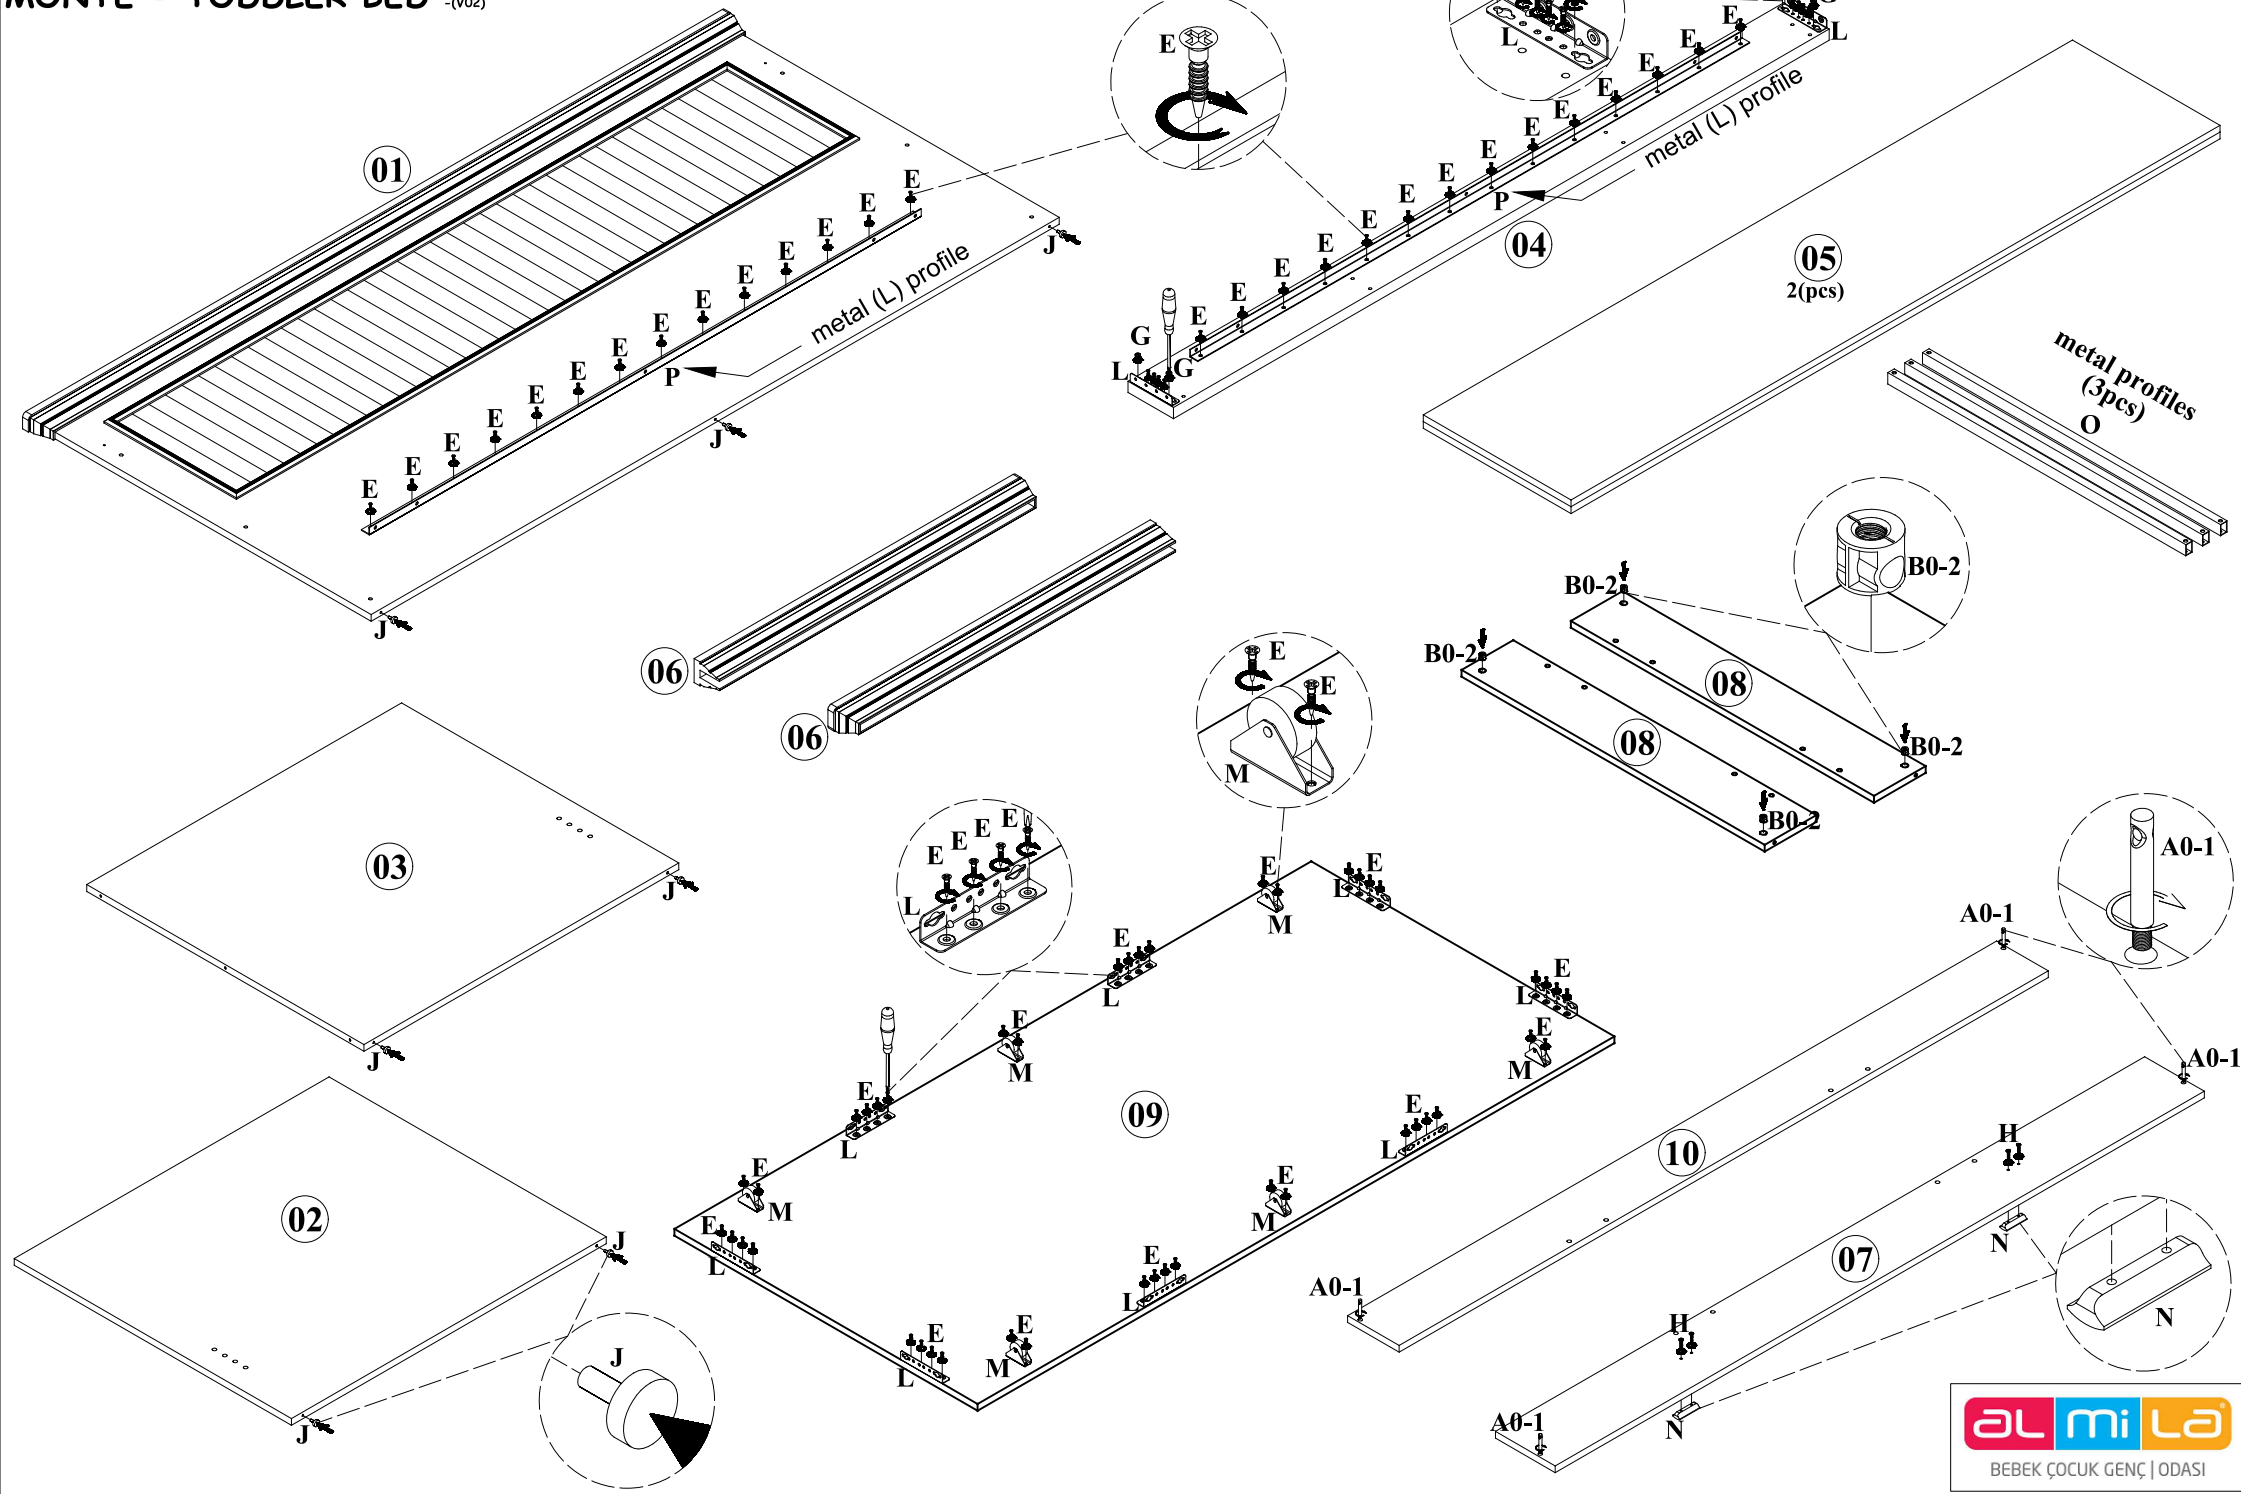


# Montaj Talimatı (Assembly Instruction) -3

MONTE - TODDLER BED - (V02)

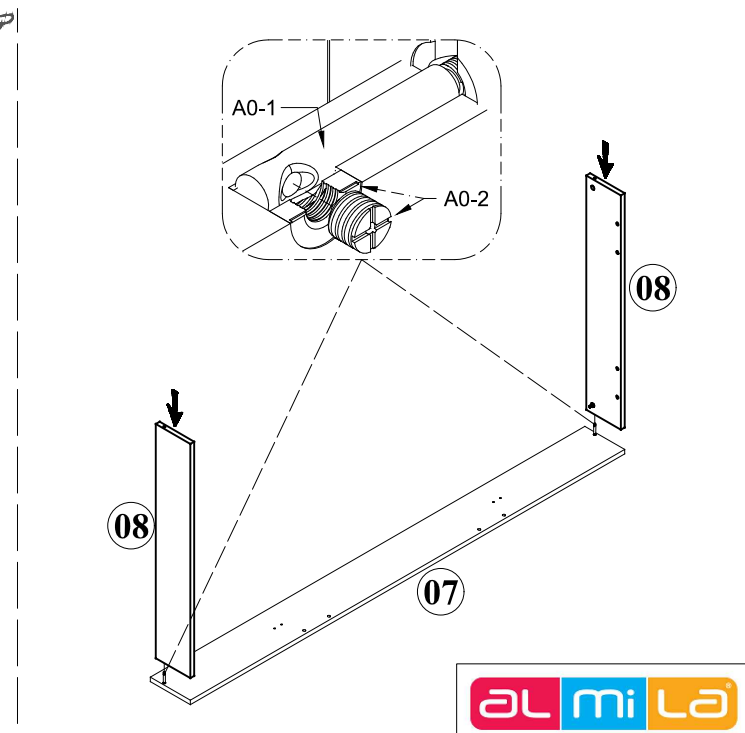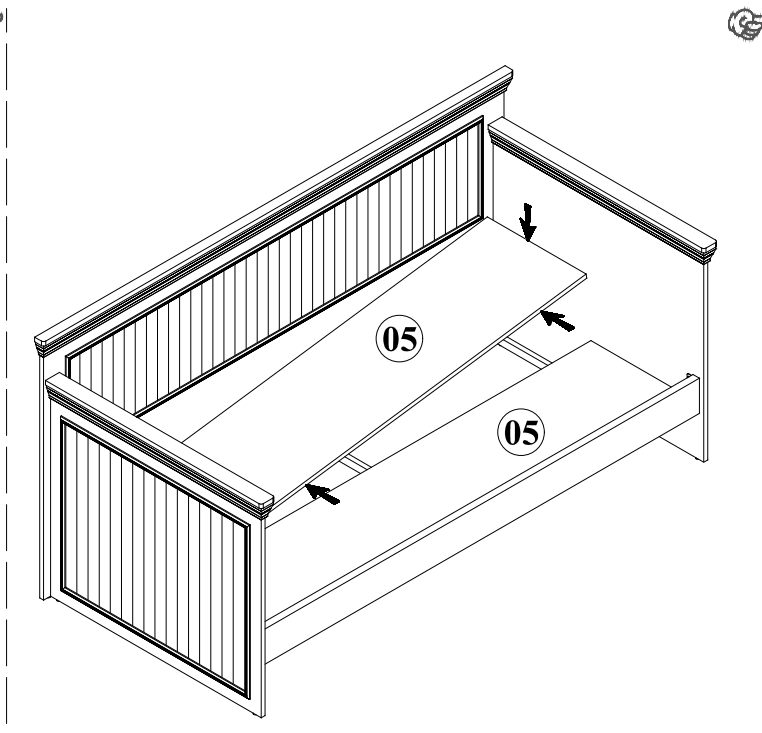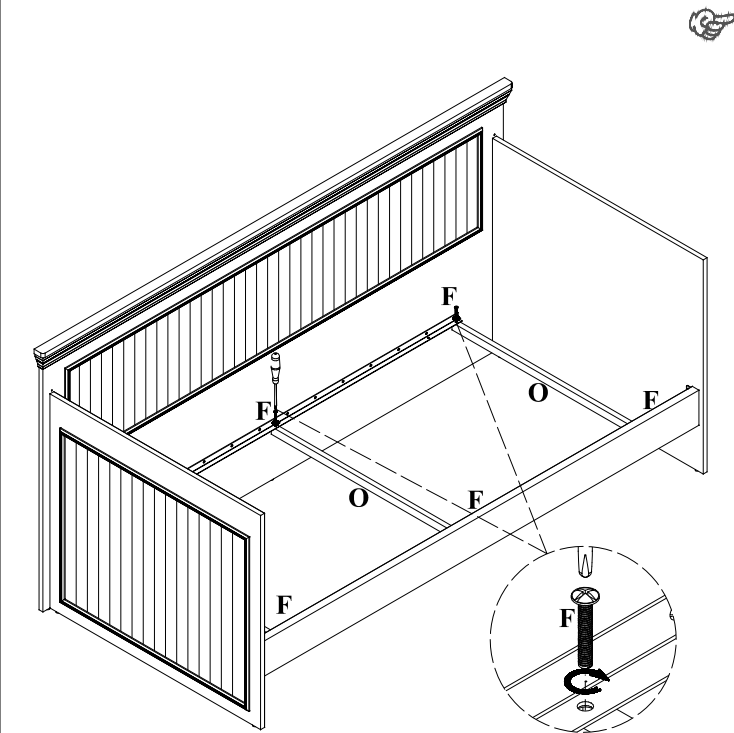
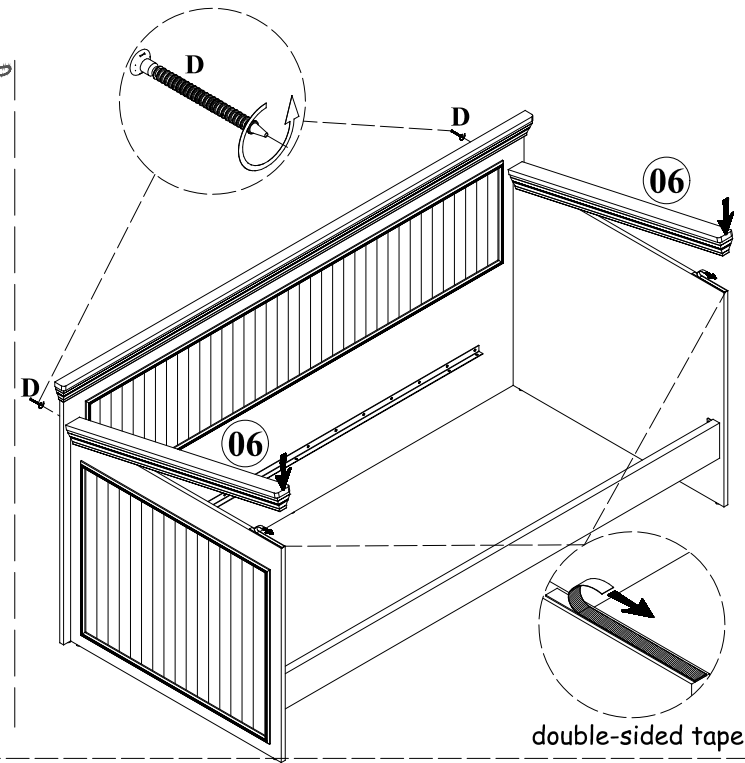
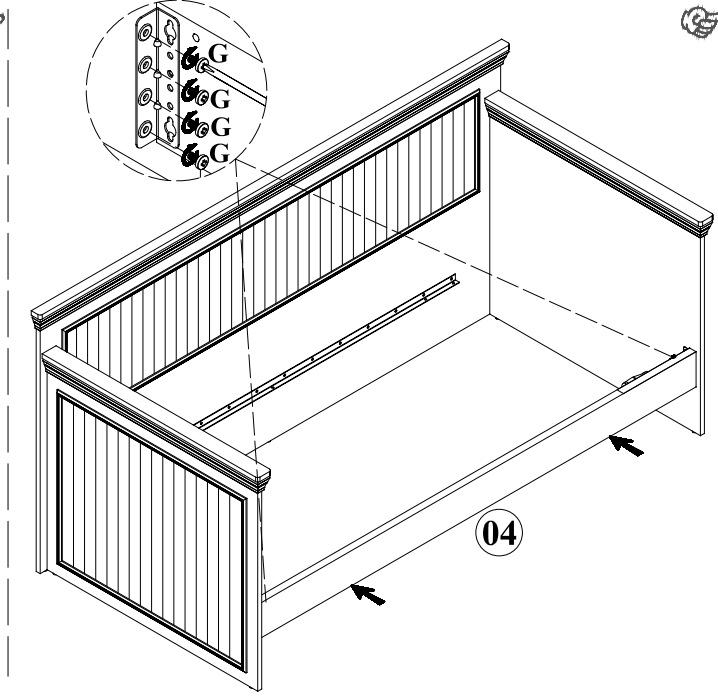
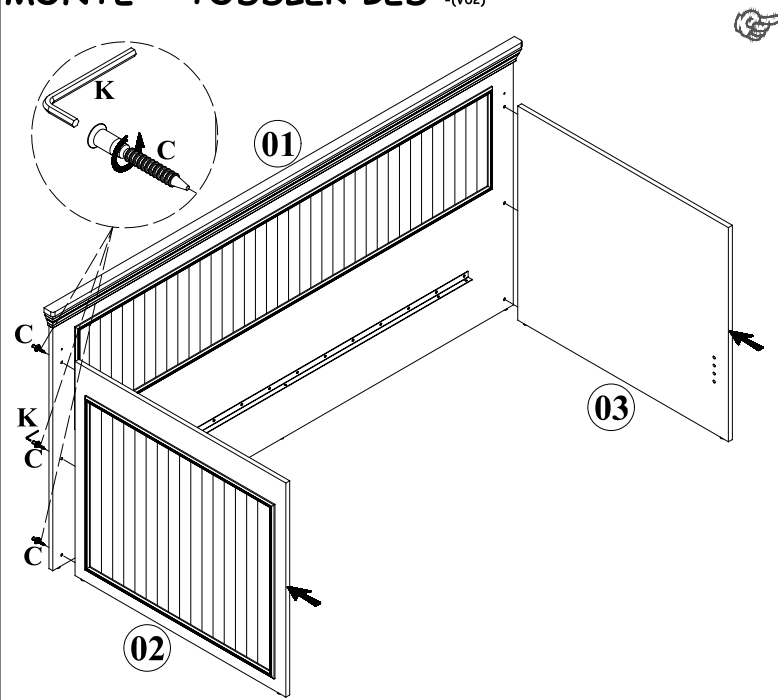


# Montaj Talimatı (Assembly Instruction) -4

## MONTE - TODDLER BED - (V02)

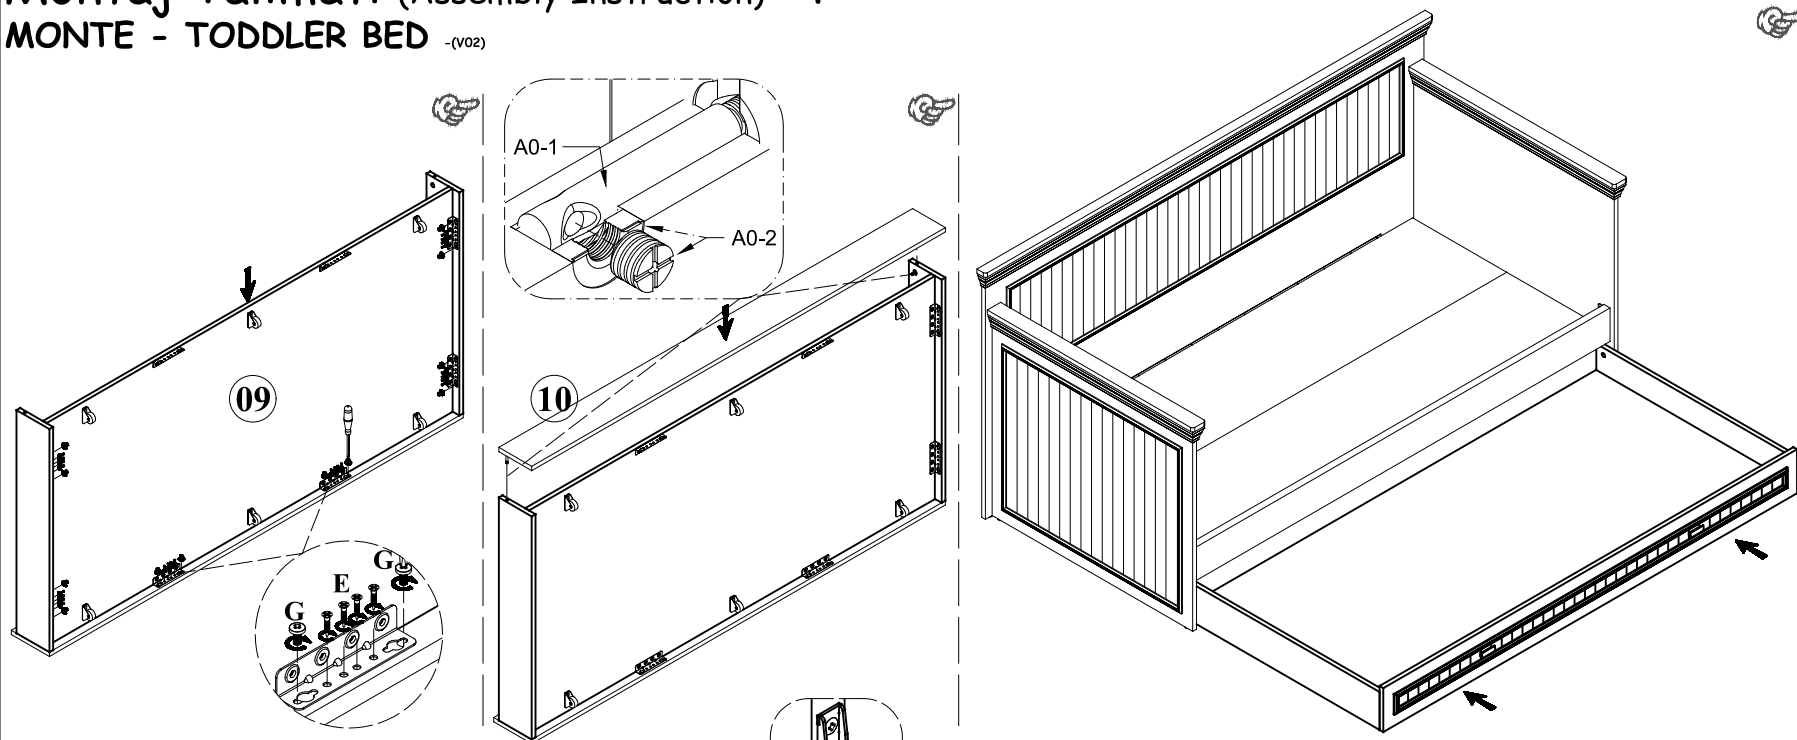

### (Optional) Safety Fence

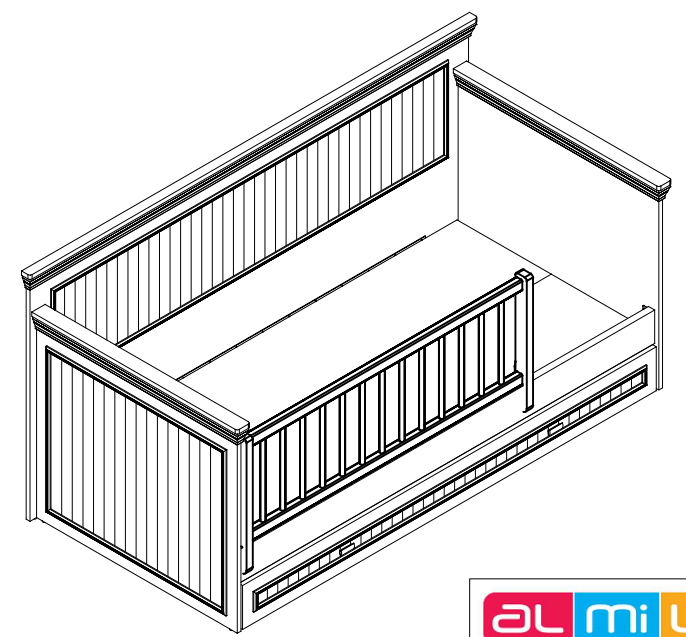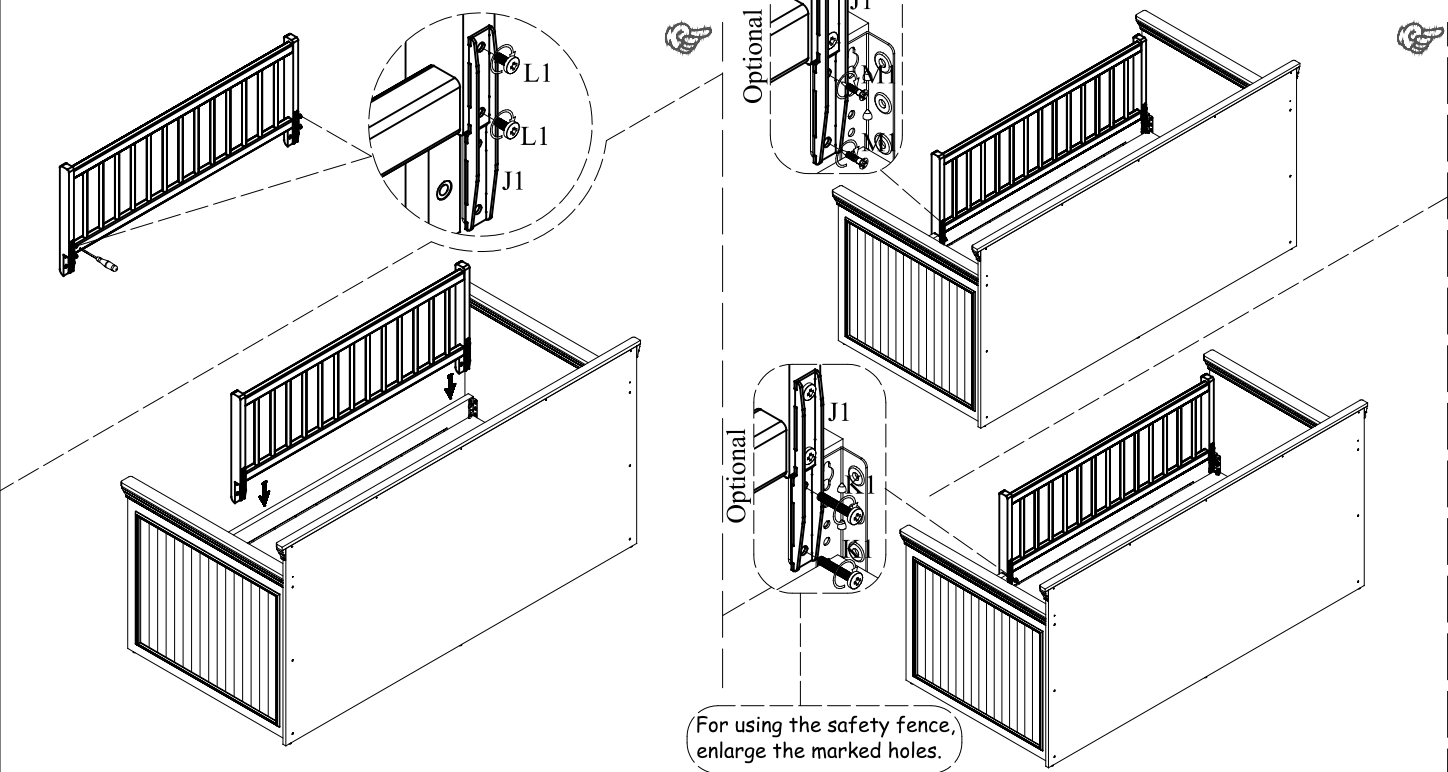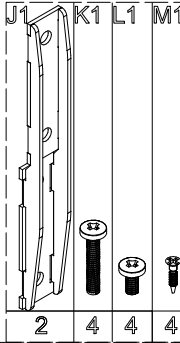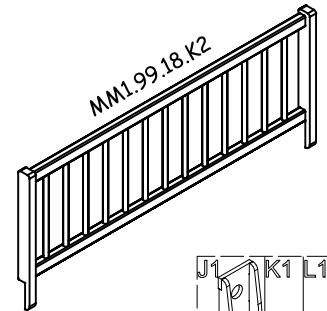

For using the safety fence,  
enlarge the marked holes.