

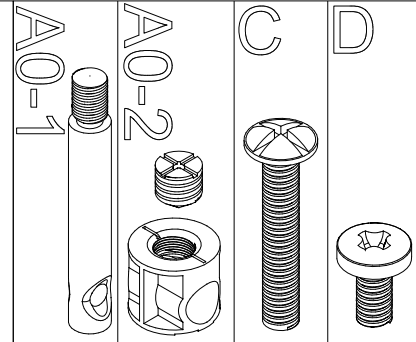


# Montaj Talimatı (Assembly Instruction) -1


## TODI - TODDLER BED (BASIC) -(v01)

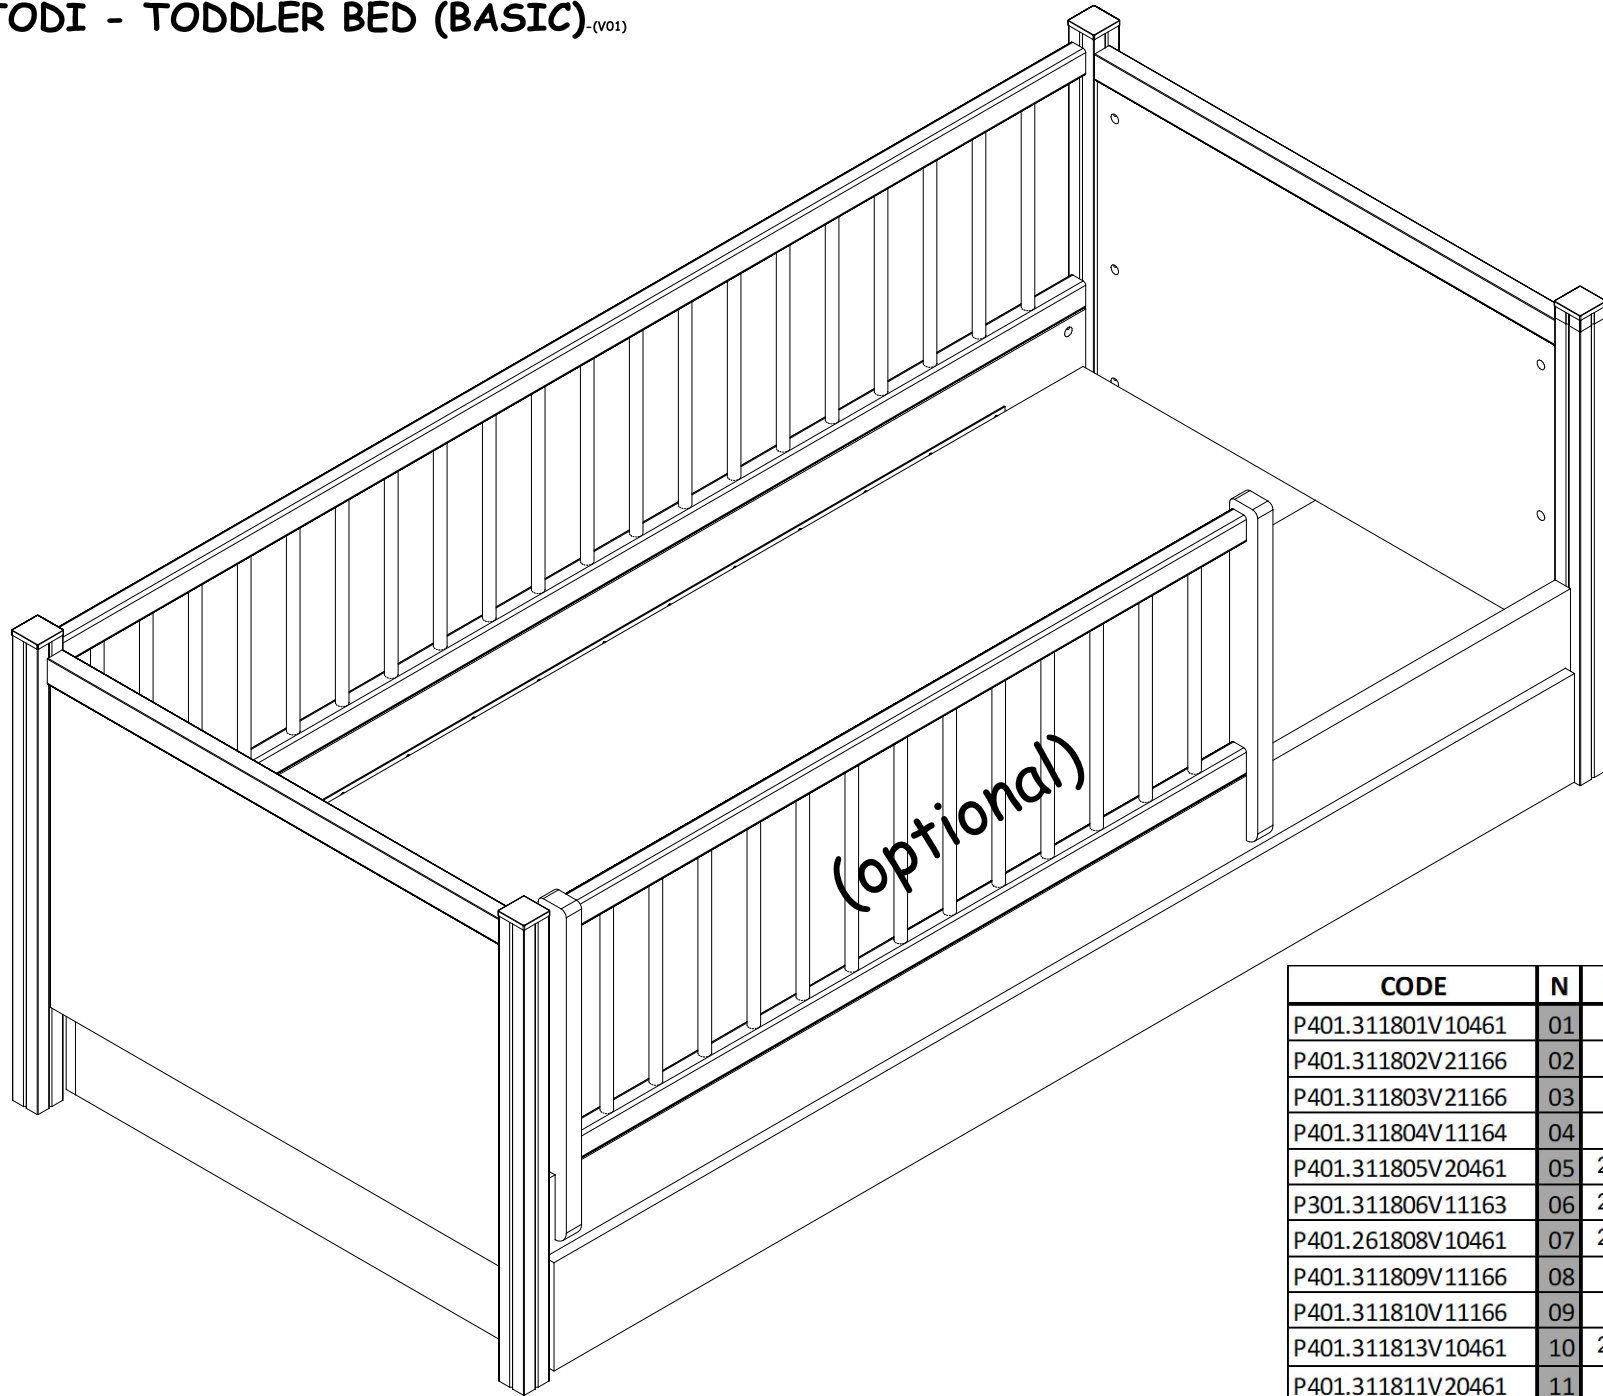


28 28 6 16

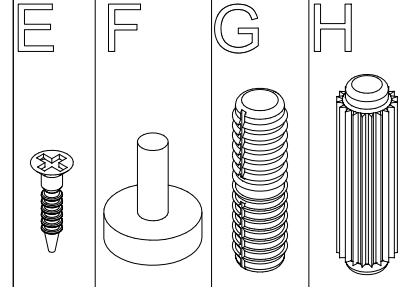

104 4 6 4

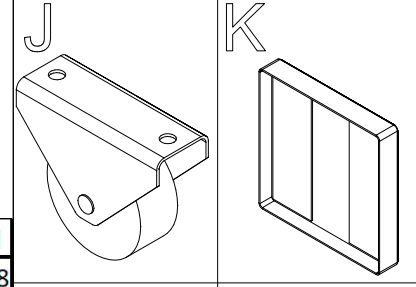

6 4

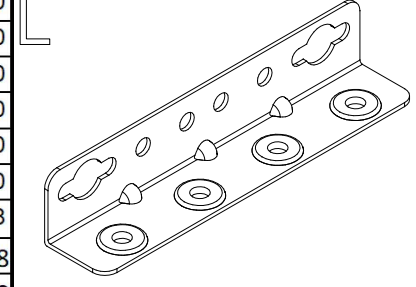


8

CODE	N	W	x	L	x	H
P401.311801V10461	01	903	x	550	x	18
P401.311802V21166	02	795	x	50	x	50
P401.311803V21166	03	795	x	50	x	50
P401.311804V11164	04	903	x	45	x	30
P401.311805V20461	05	2020	x	185	x	30
P301.311806V11163	06	2020	x	440	x	30
P401.261808V10461	07	2020	x	140	x	30
P401.311809V11166	08	795	x	50	x	50
P401.311810V11166	09	795	x	50	x	50
P401.311813V10461	10	2000	x	184	x	18
P401.311811V20461	11	934		159		18
P401.996411V10611	12	2000		455		18
P401.311812V20611	13	1962		934		18
P401.261813V10461	14	2000		159		18







# Montaj Talimatı (Assembly Instruction) -2

## TODI - TODDLER BED (BASIC) (v01)

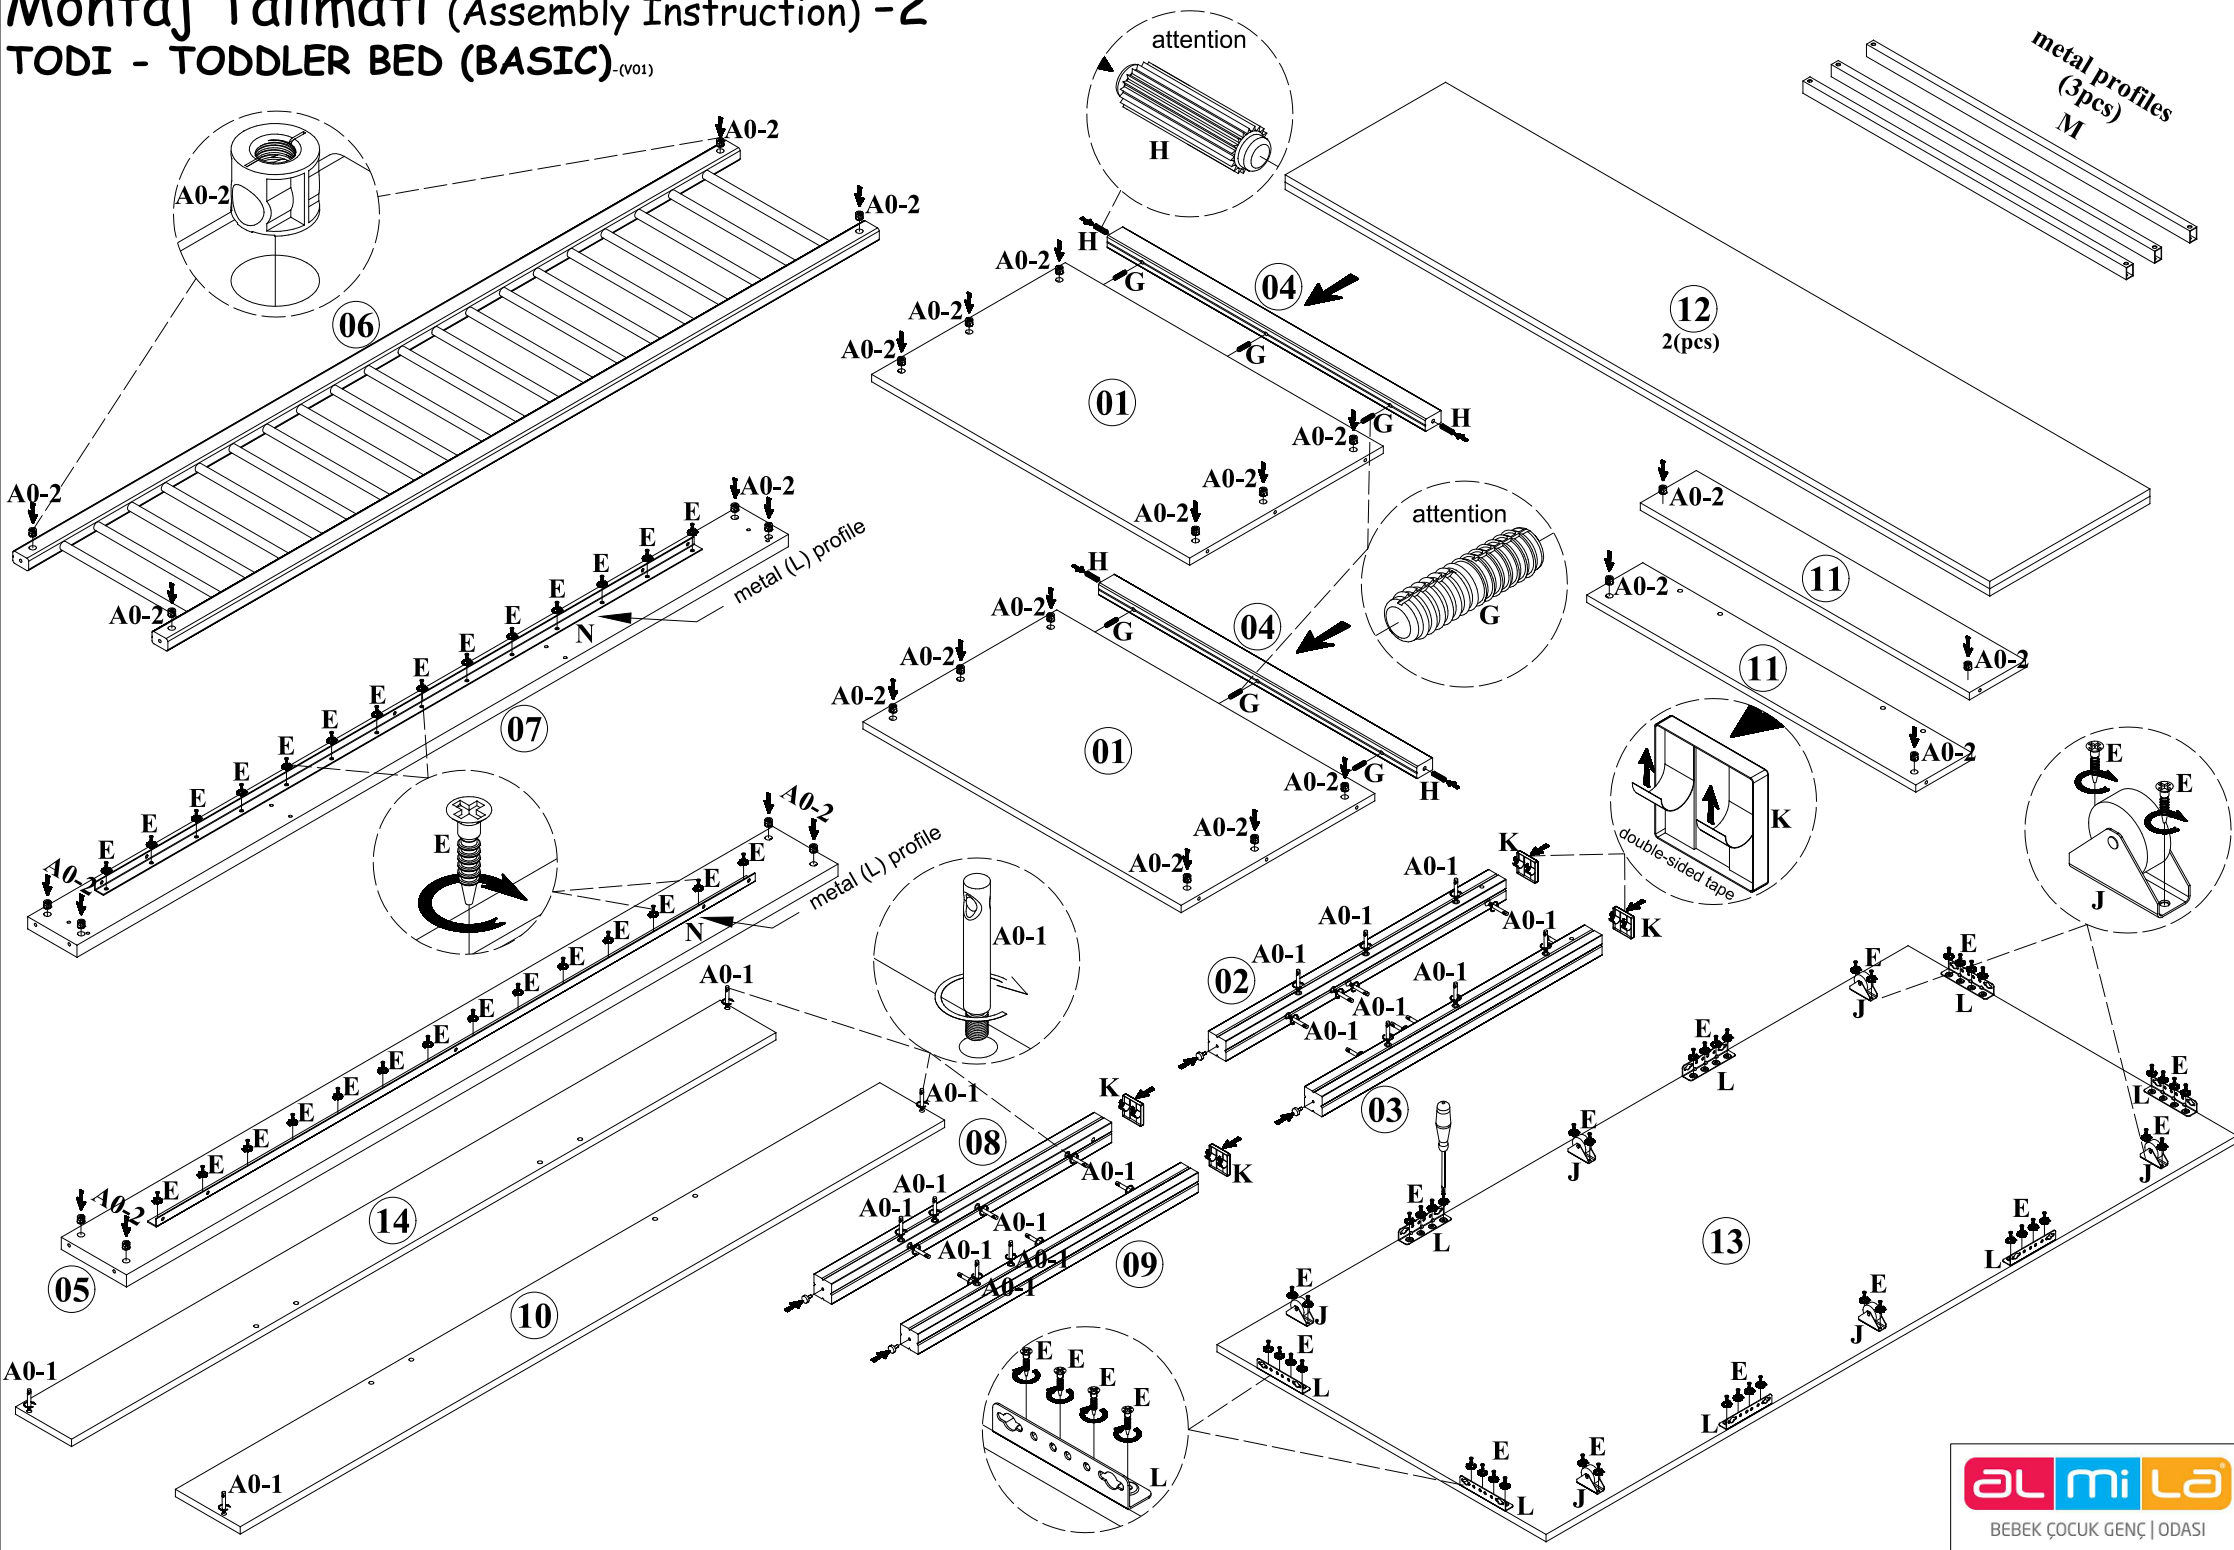





# Montaj Talimatı (Assembly Instruction) -3

## TODI - TODDLER BED (BASIC)\_(v01)

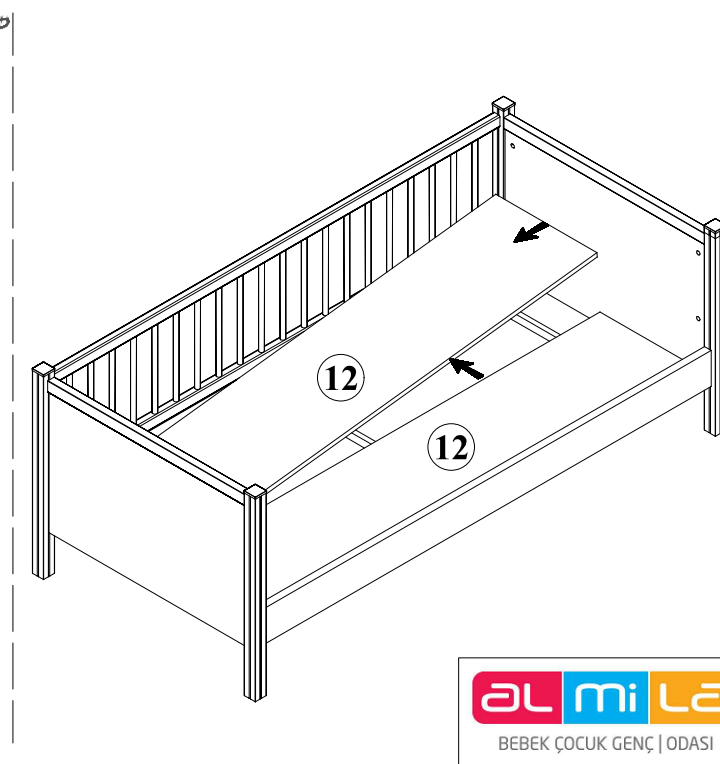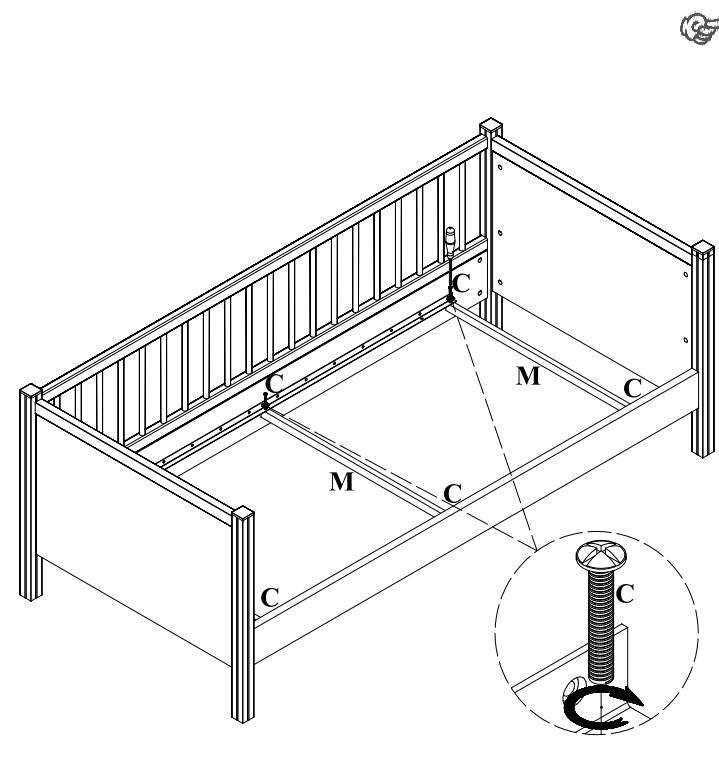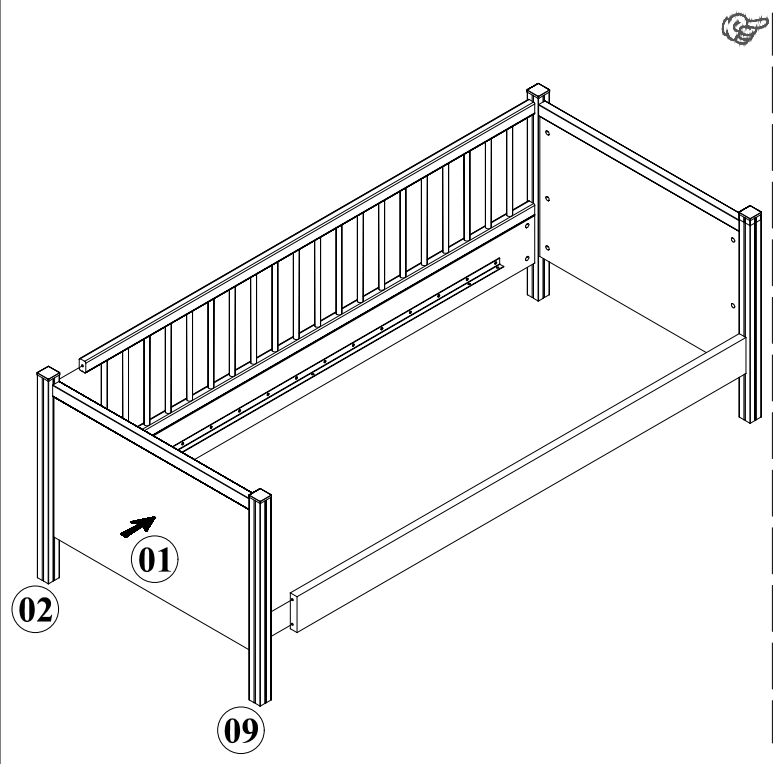
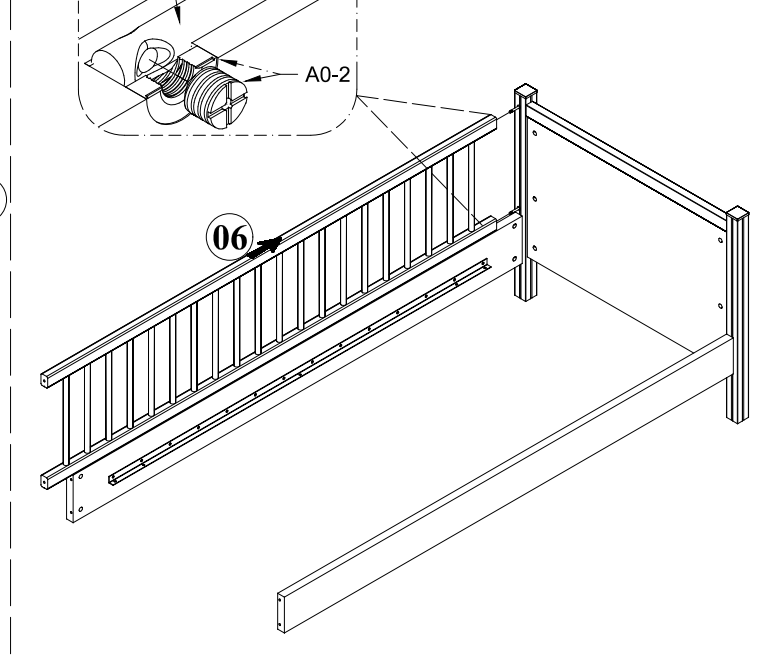
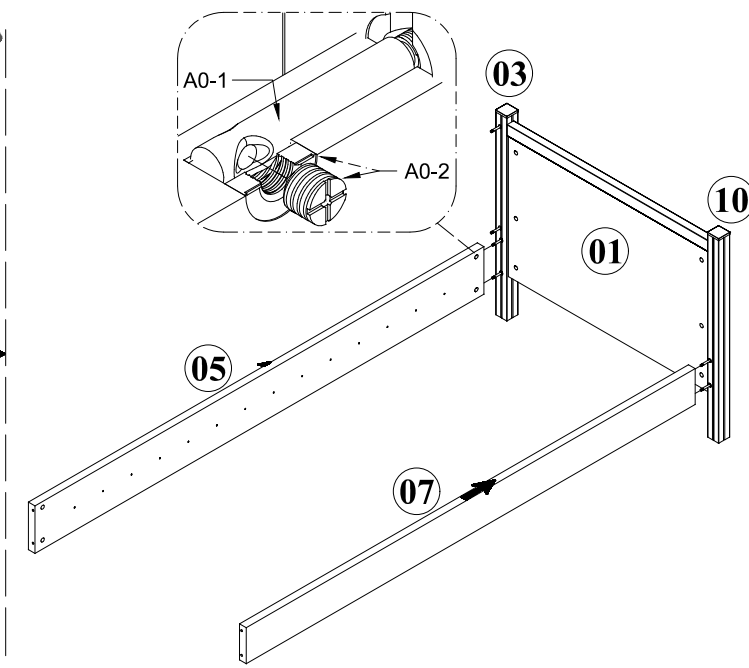
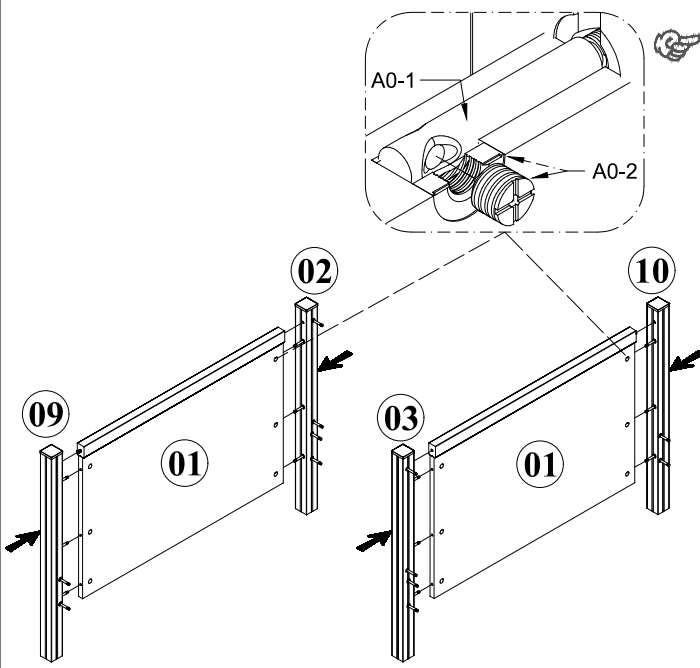


# Montaj Talimatı (Assembly Instruction) -4


## TODI - TODDLER BED (BASIC) (v01)

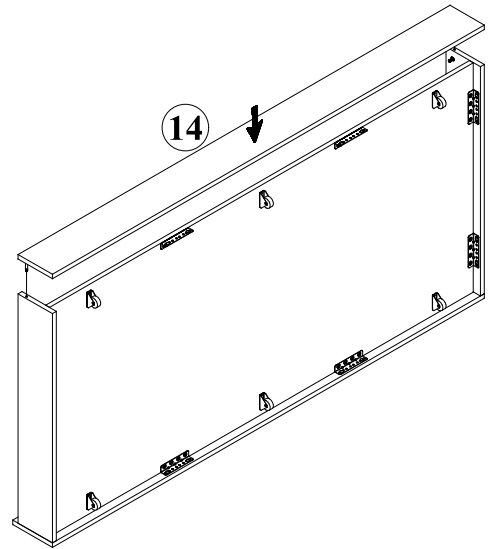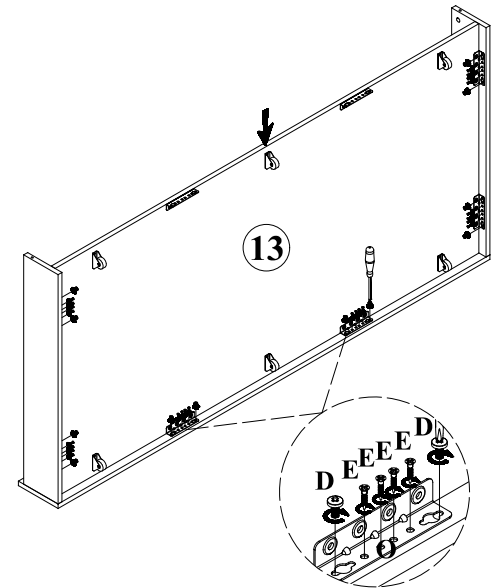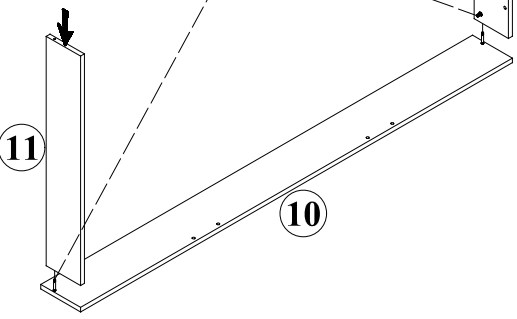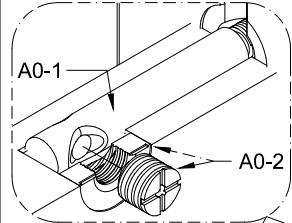

### (Optional) Safety Fence

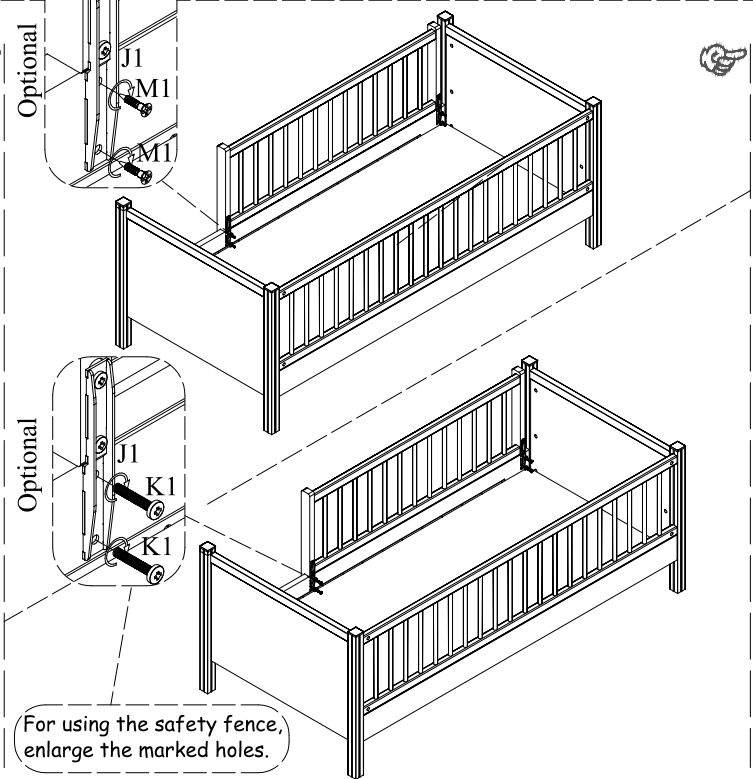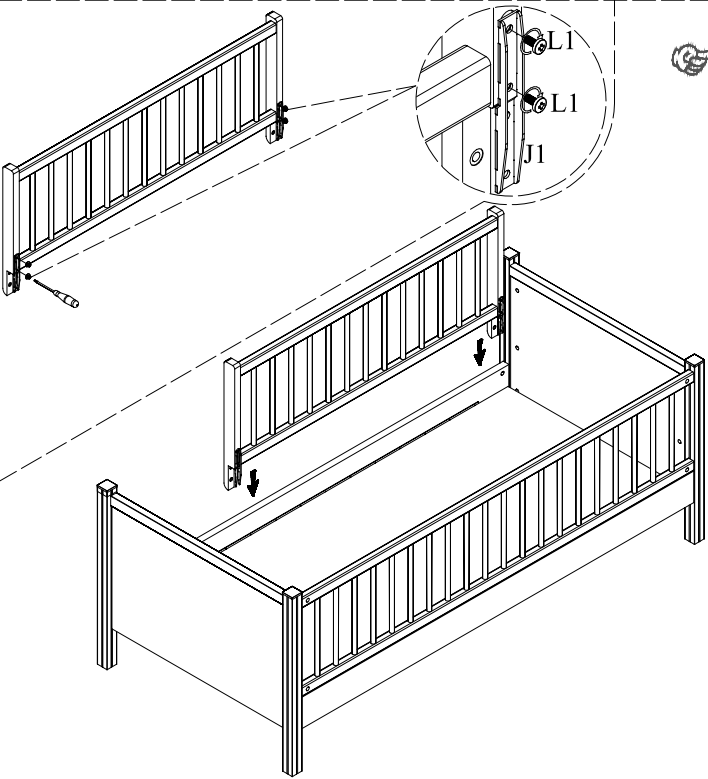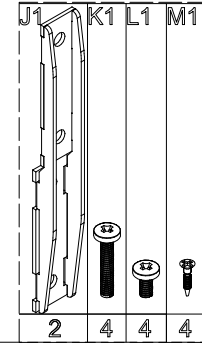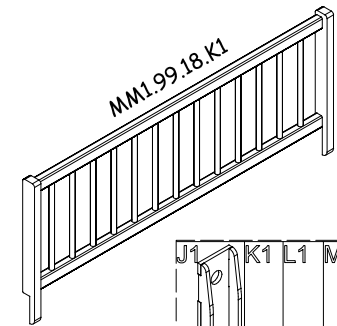

For using the safety fence,  
enlarge the marked holes.

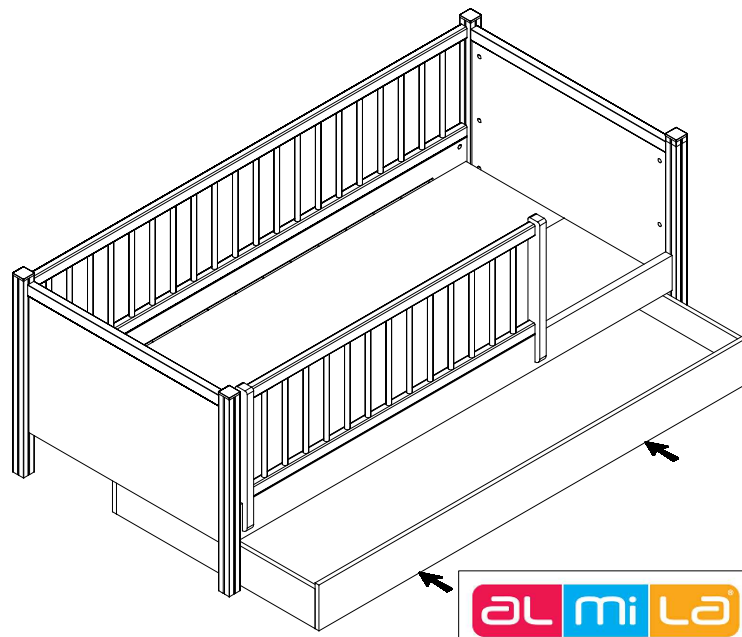

# Montaj Talimatı (Assembly Instruction) -5

## TODI - TODDLER BED (SOFA) WITH CANOPY

rod for mosquito net U

CODE	N	W	x	L	x	H
P403.311850V11166	50	772	x	50	x	50
P403.311851V11166	51	772	x	50	x	50
P403.311852V11166	52	772	x	50	x	50
P403.311853V11166	53	772	x	50	x	50
P403.261854V10461	54	2020	x	80	x	30
P403.311855V10461	55	903	x	80	x	18

dismante

# Montaj Talimatı (Assembly Instruction) -6

## TODI - TODDLER BED (ÇATILI) WITH ROOF - (V01)

